




the small washers (4) and small screws (5).

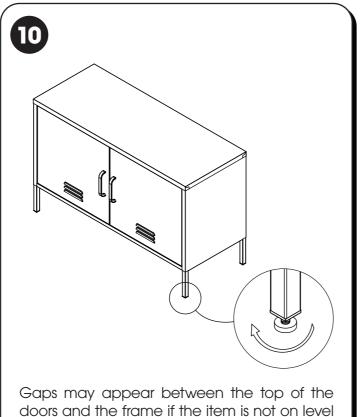

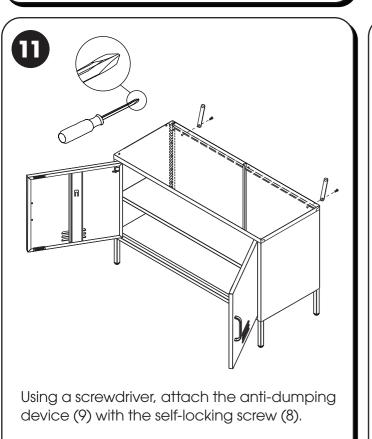

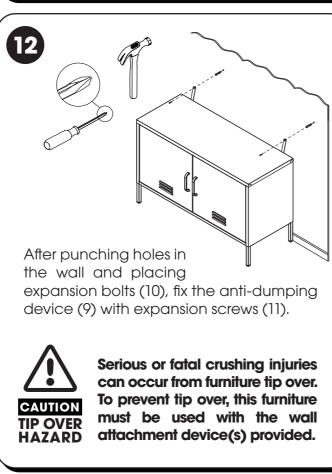

ground; use the plastic foot cover to level.



Assembly Instructions

Please read through these instructions and ensure they are kept for future reference. All parts and hardware are listed on this guide. Please ensure the unit is securely fixed to the wall to avoid tipping. Fixings are not supplied. Please ensure you source and use correct plugs and screws for the surface you are fixing this product to.

Storage Cabinet Care Instructions

Dust regularly with a clean, dry cloth. Wipe up any spills immediately with a damp cloth and then dry the surface with a clean, dry cloth. Never use abrasive or corrosive cleaning agents. Always use placemats and coasters to protect the surface from moisture and heat. Avoid sharp objects scratching the surface. Avoid placing on uneven surfaces. Do not drag furniture, always lift to move.

Maximum weight capacity

Top panel: 30kg Shelf: 10kg


Ø6x70mn

x 2

x 2

Bottom panel: 15kg

Storage Cabinet Parts & Hardware

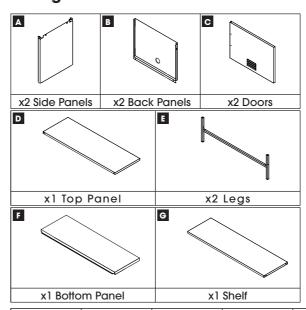

Ø9x0.8mn


x 4

dunn-

Ø4x38mm

Ø12x0.8mn


x 2

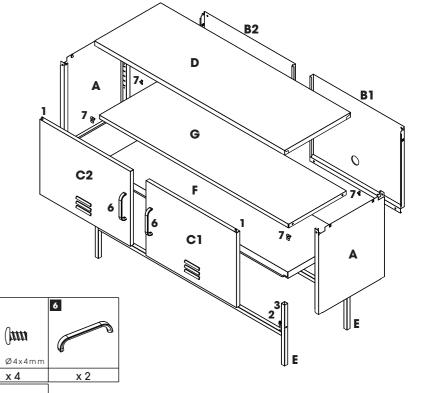






Tell us how you feel info@artissin.com.au




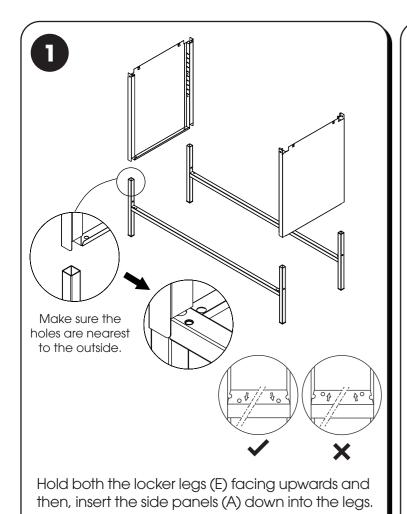

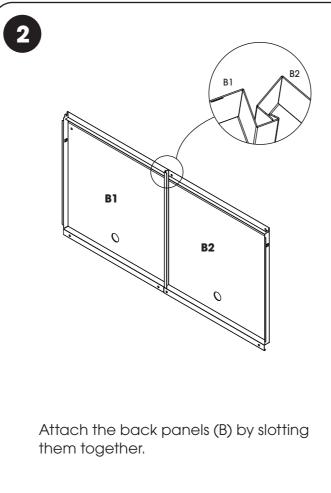

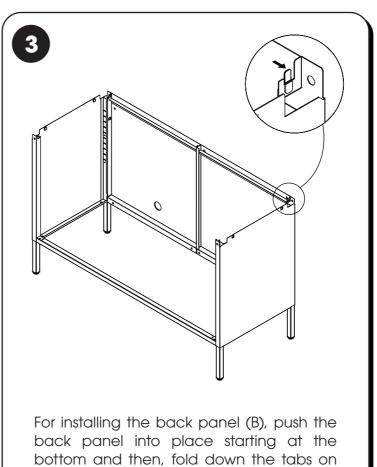

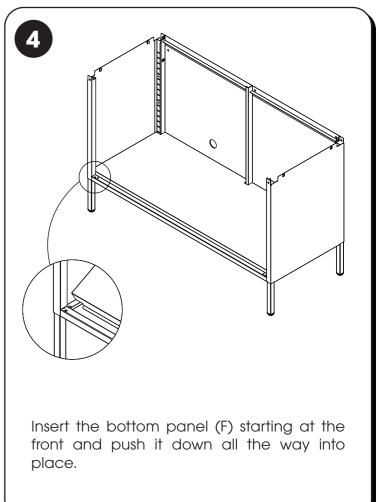


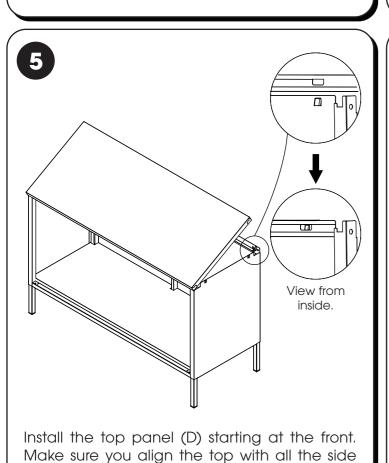


and back panels and then, push the top panel


down with enough force to click it into place.

Ensure all the panels are slotted in correctly.

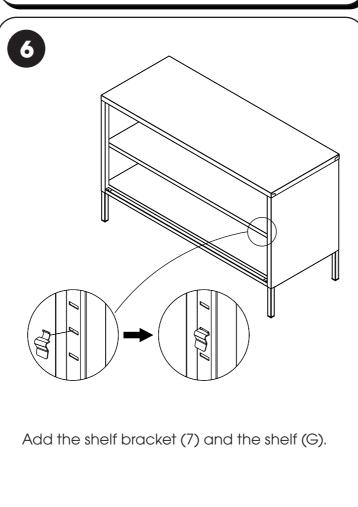

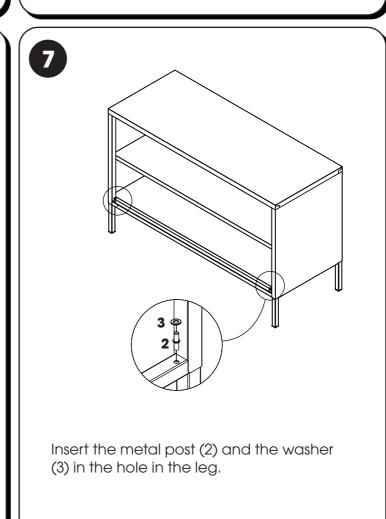

the corners of the back panel.

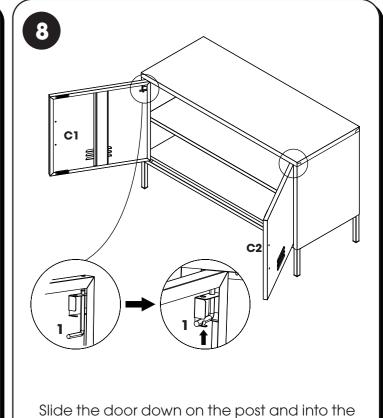

correct position against the cabinet. At the

top of the door, insert the L-shape post (1) up

into position through the holes, and bend

the tab to secure in place.