 
 











FURNI-O-LED-BS-3D

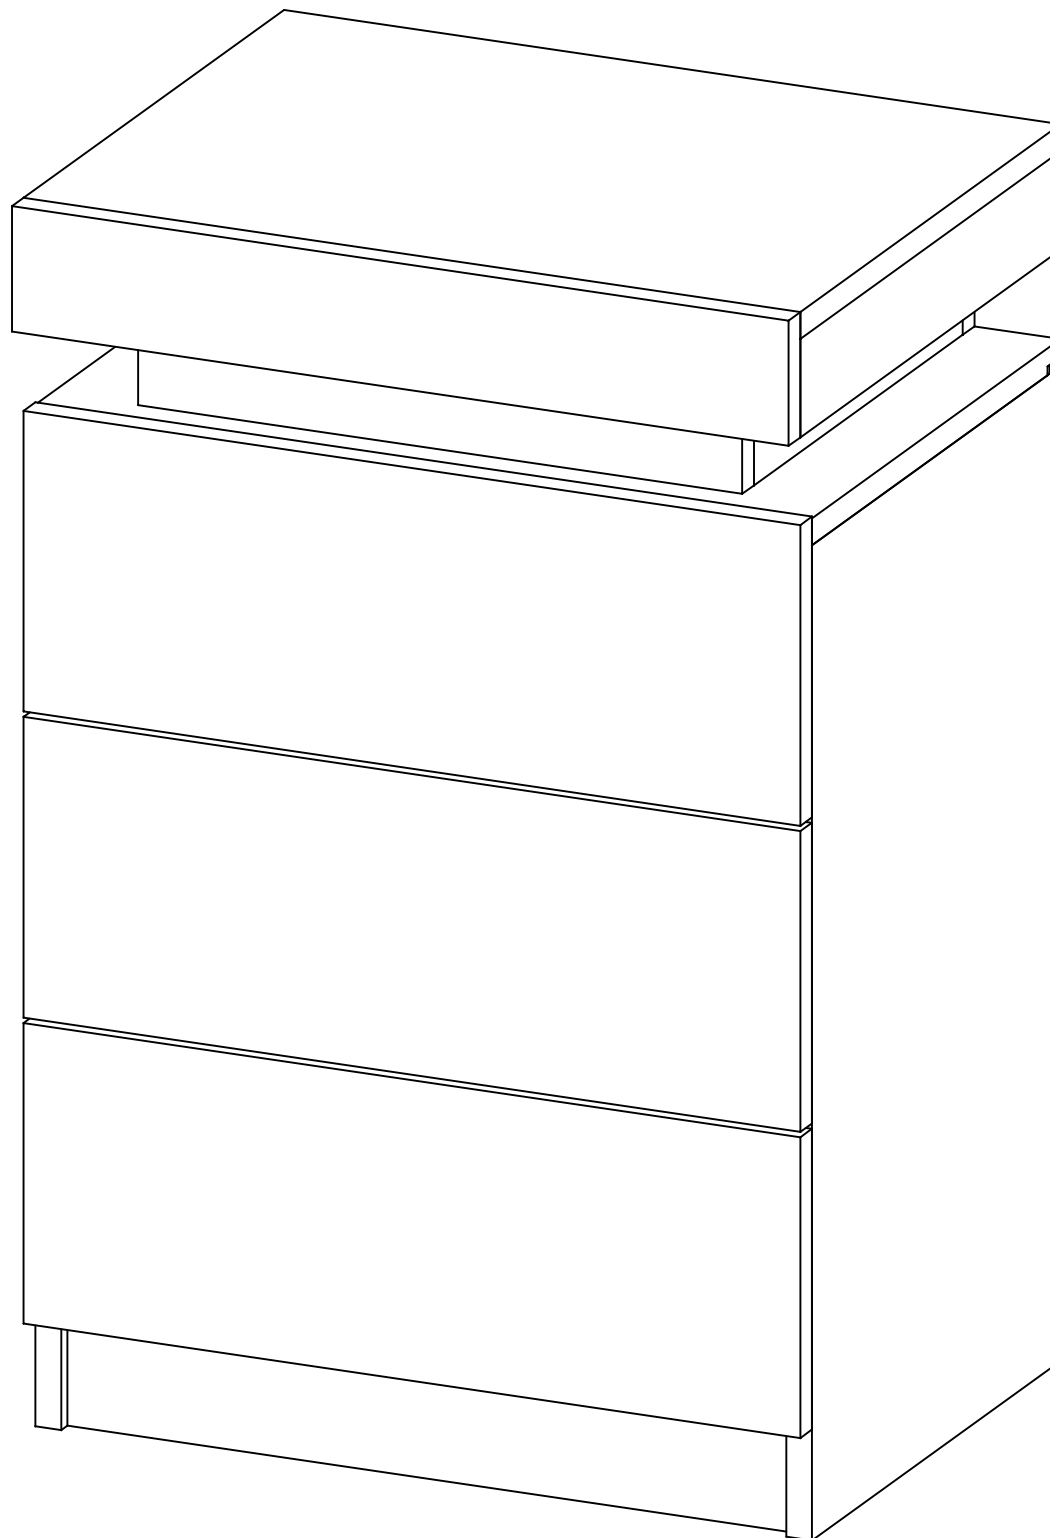

Warning instructions:

         1. Assembly should to be carried out by a competent adult only.
2. Regularly check all parts firmly fixed to ensure the furture for safe use.
3. Wipe clean only.
4. The warning sticker on the furniture is a mandatory requirement in Australia, and it can be removed by wet cloth.

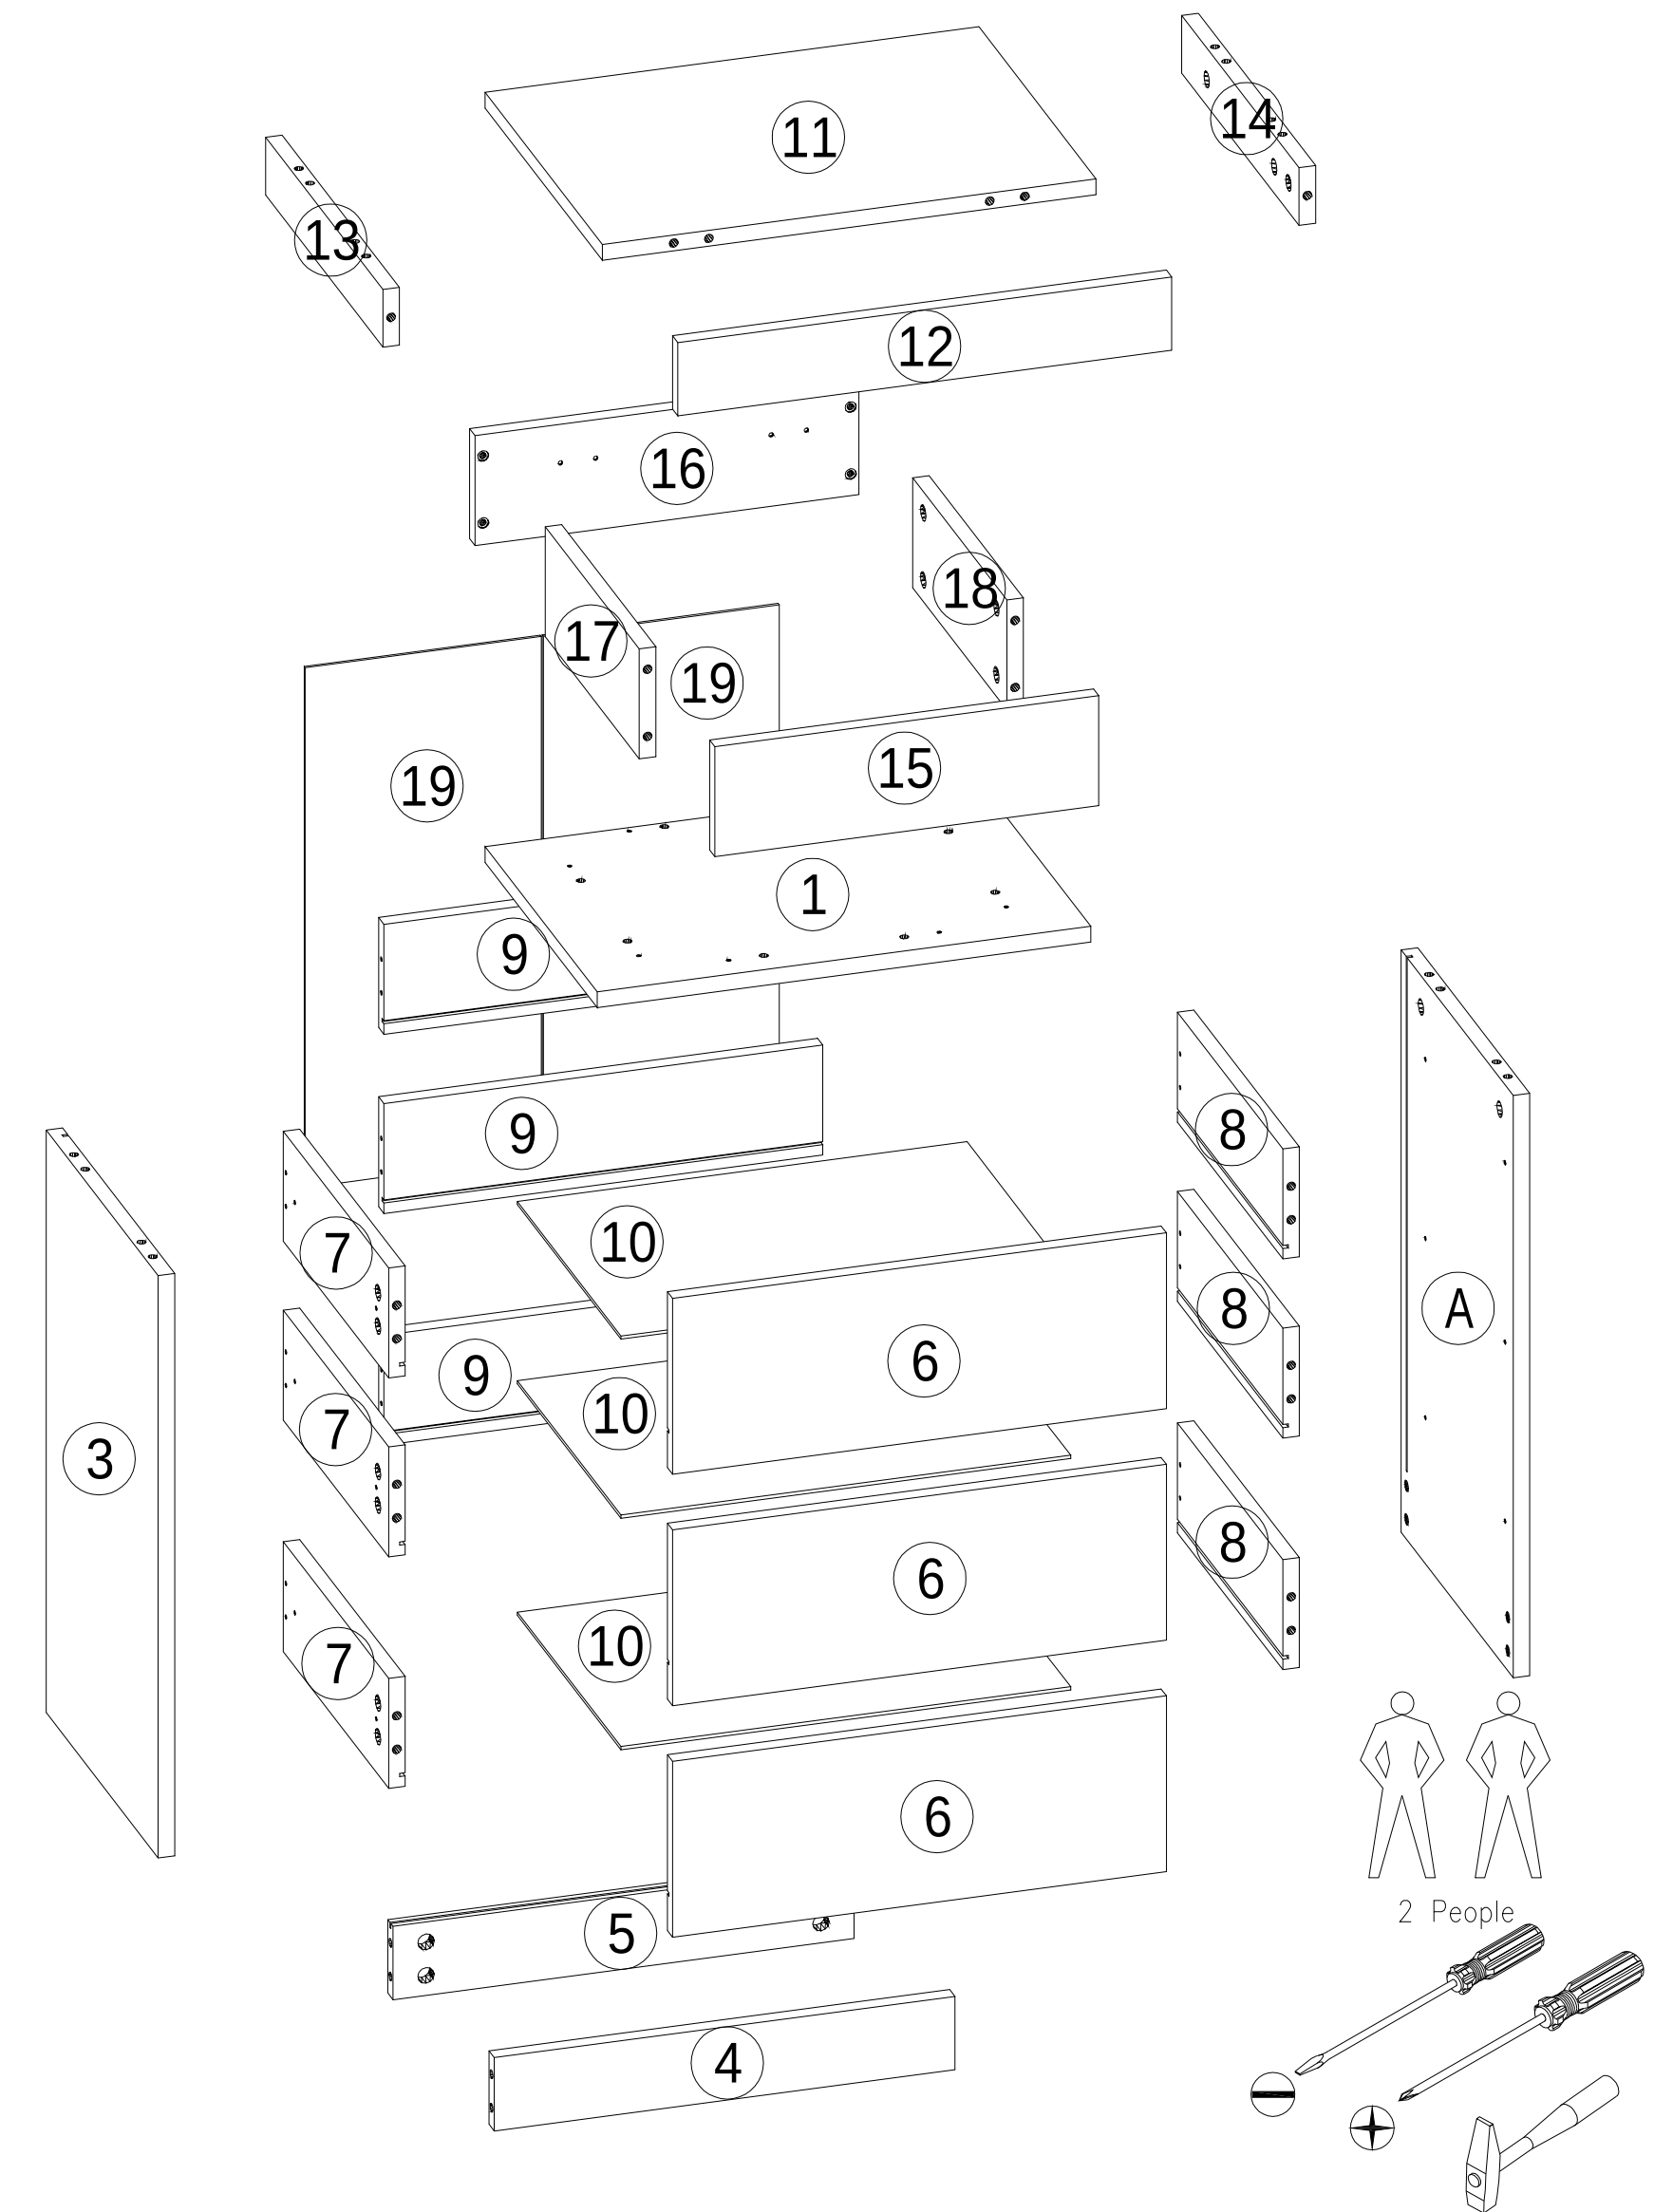

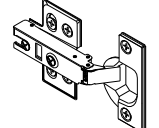 φ6*38mm	 φ15*11mm	 φ8*40mm	 ST3.5*35mm	 ST3.5*14mm									
B	41 PCS	C	41 PCS	D	18 PCS	E	22 PCS	F	52 PCS	G	2 PCS	H	1 PCS
													
J	2 PCS	K	2 PCS	L	2 PCS	M	4 PCS	N	6 PCS	P	9 PCS		
													
Q	3 PCS	R	4 PCS	S	1 PCS	W	1 PCS						

Assembly checklist



 
Read through the instructions carefully before you begin.



Make sure you have all the required tools.
Do not use power tools.



Identify and lay out all of the components before you begin assembly.

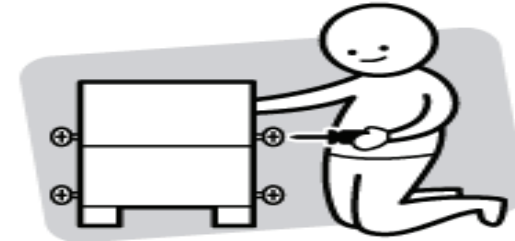





Do not fully tighten all screws until step/
process finished.





Useful Information

! Never use power tools, they can damage your components or hardware if used incorrectly.


! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

        
! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.

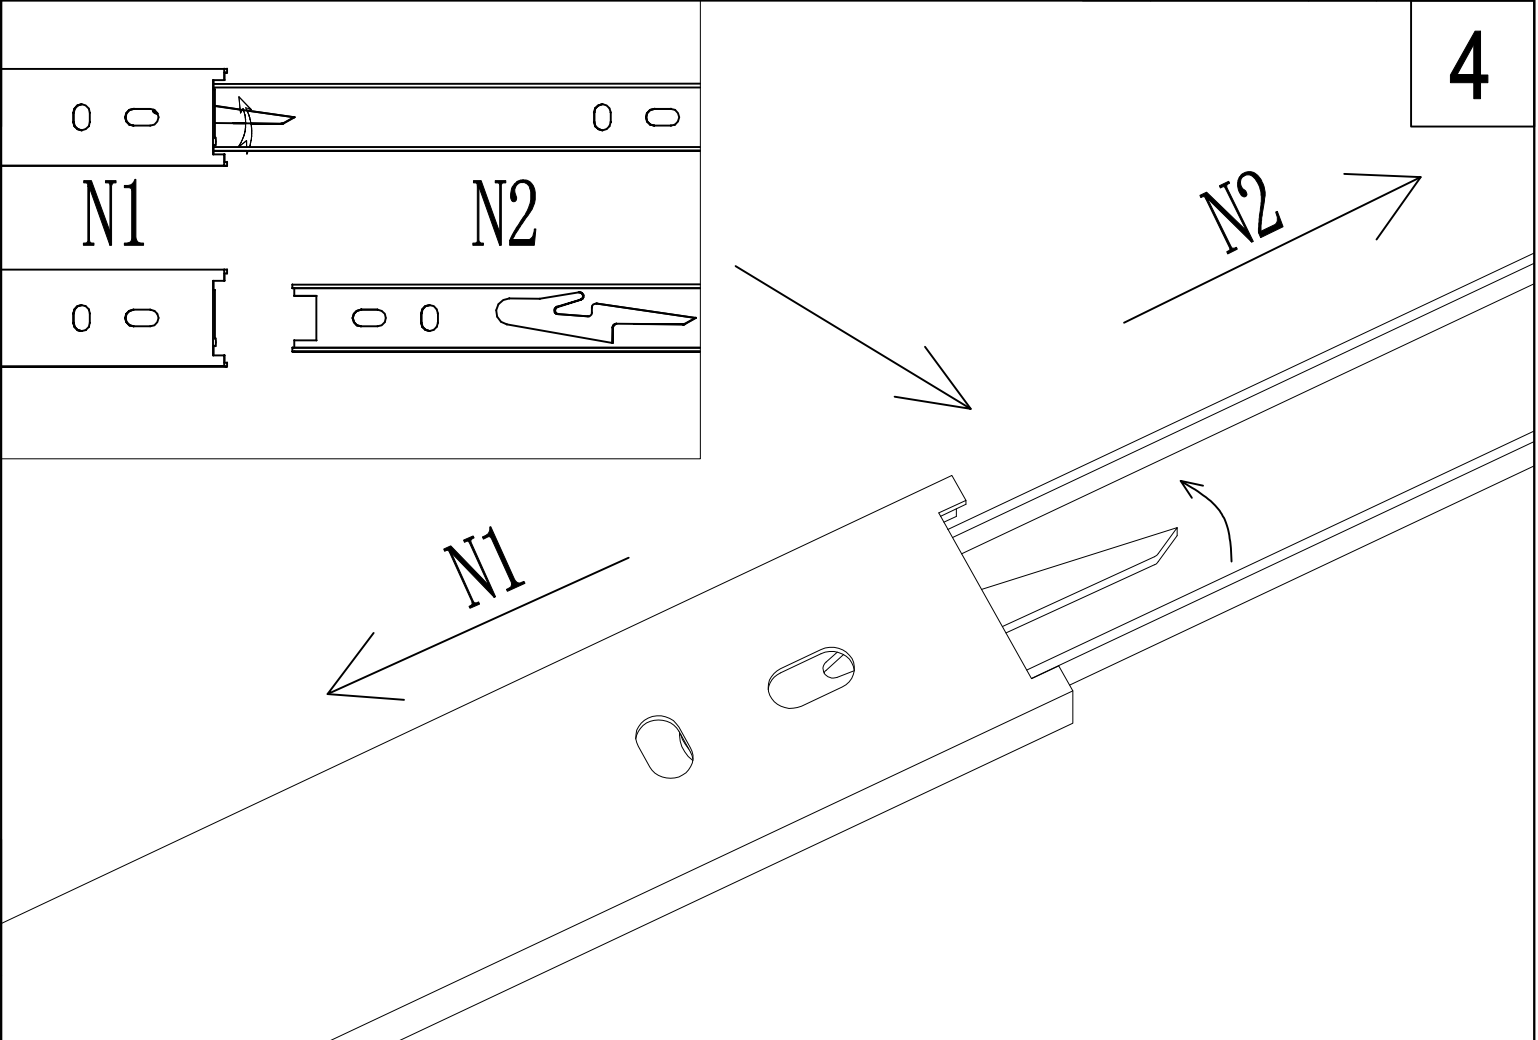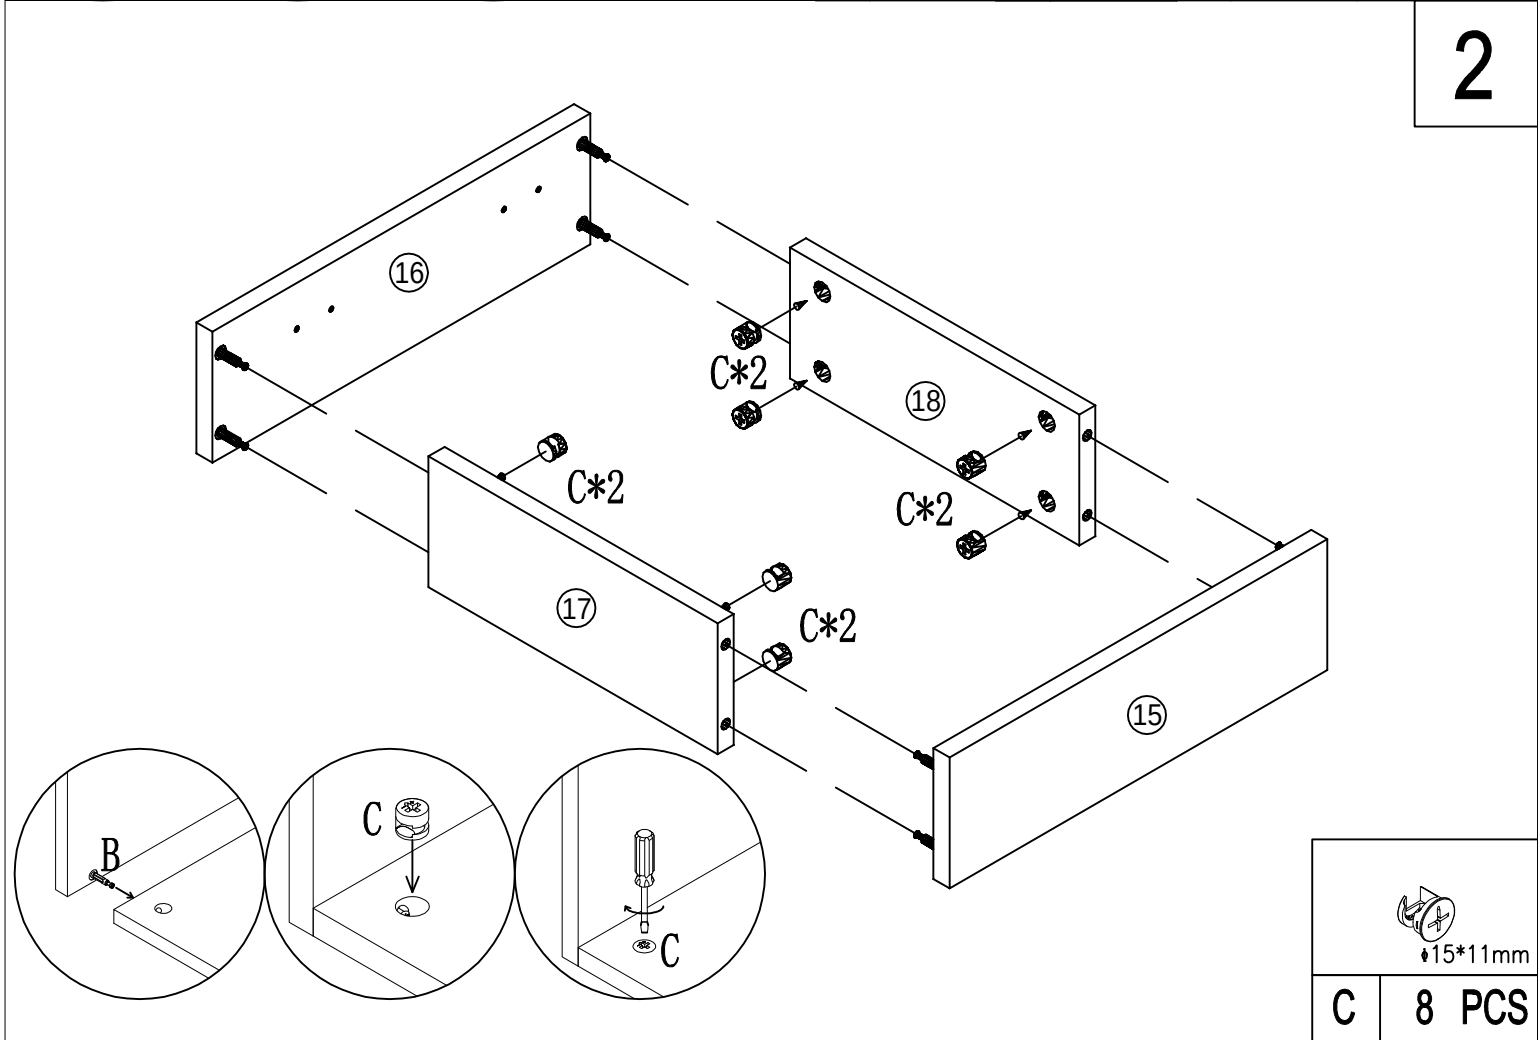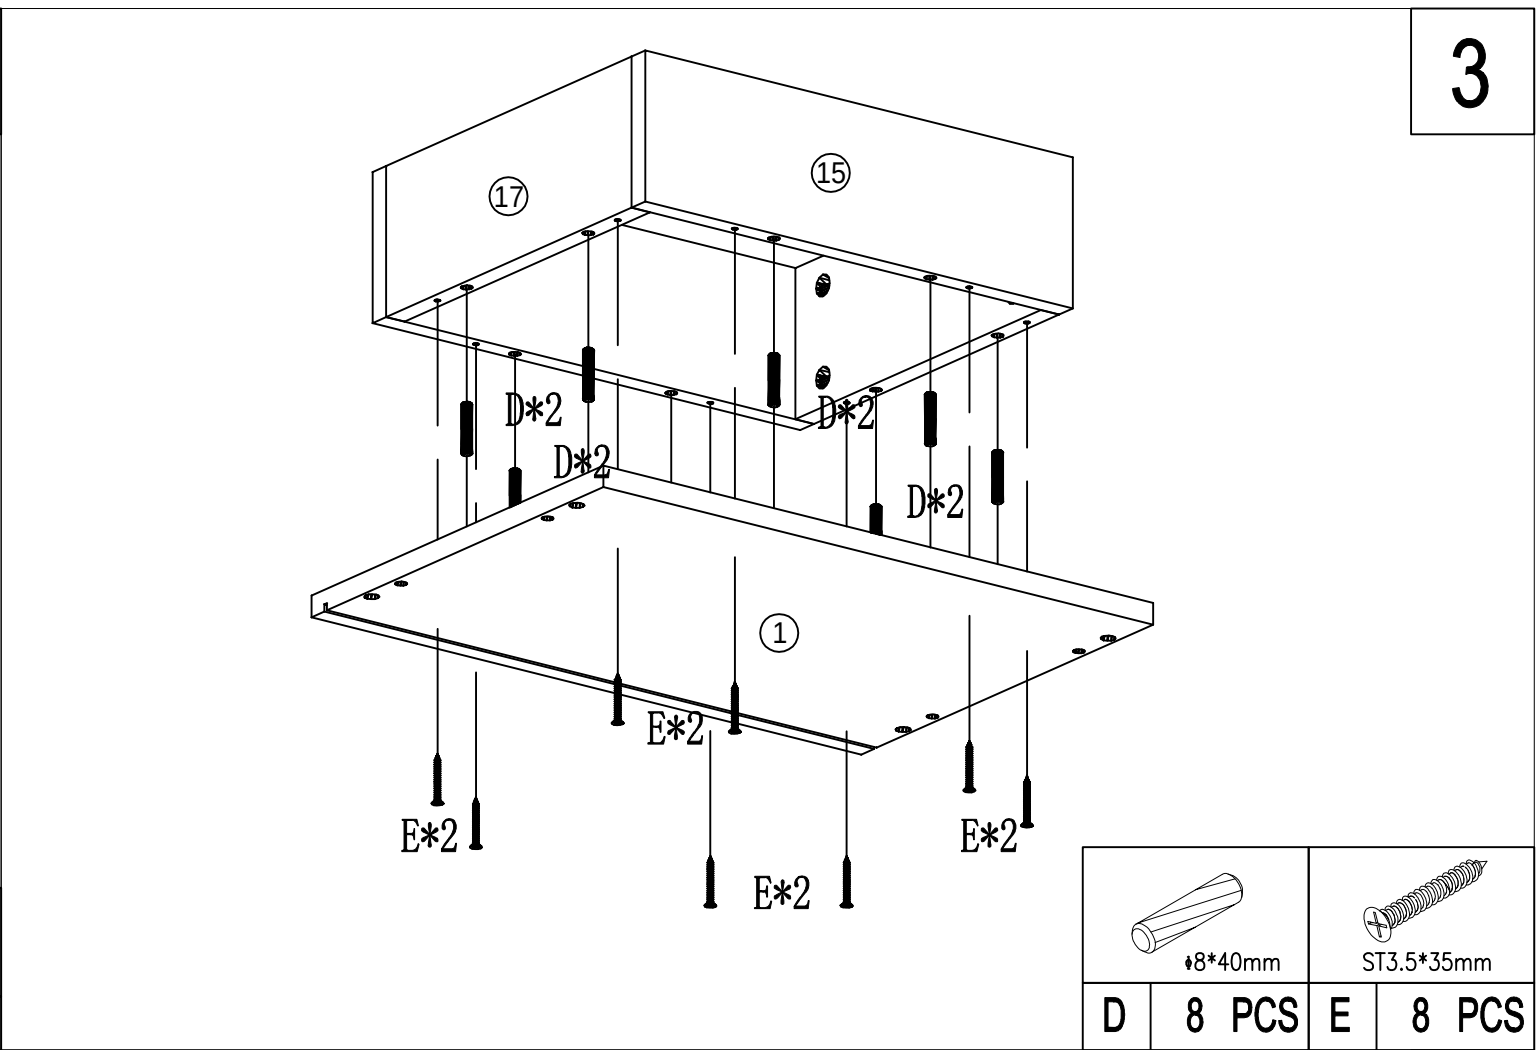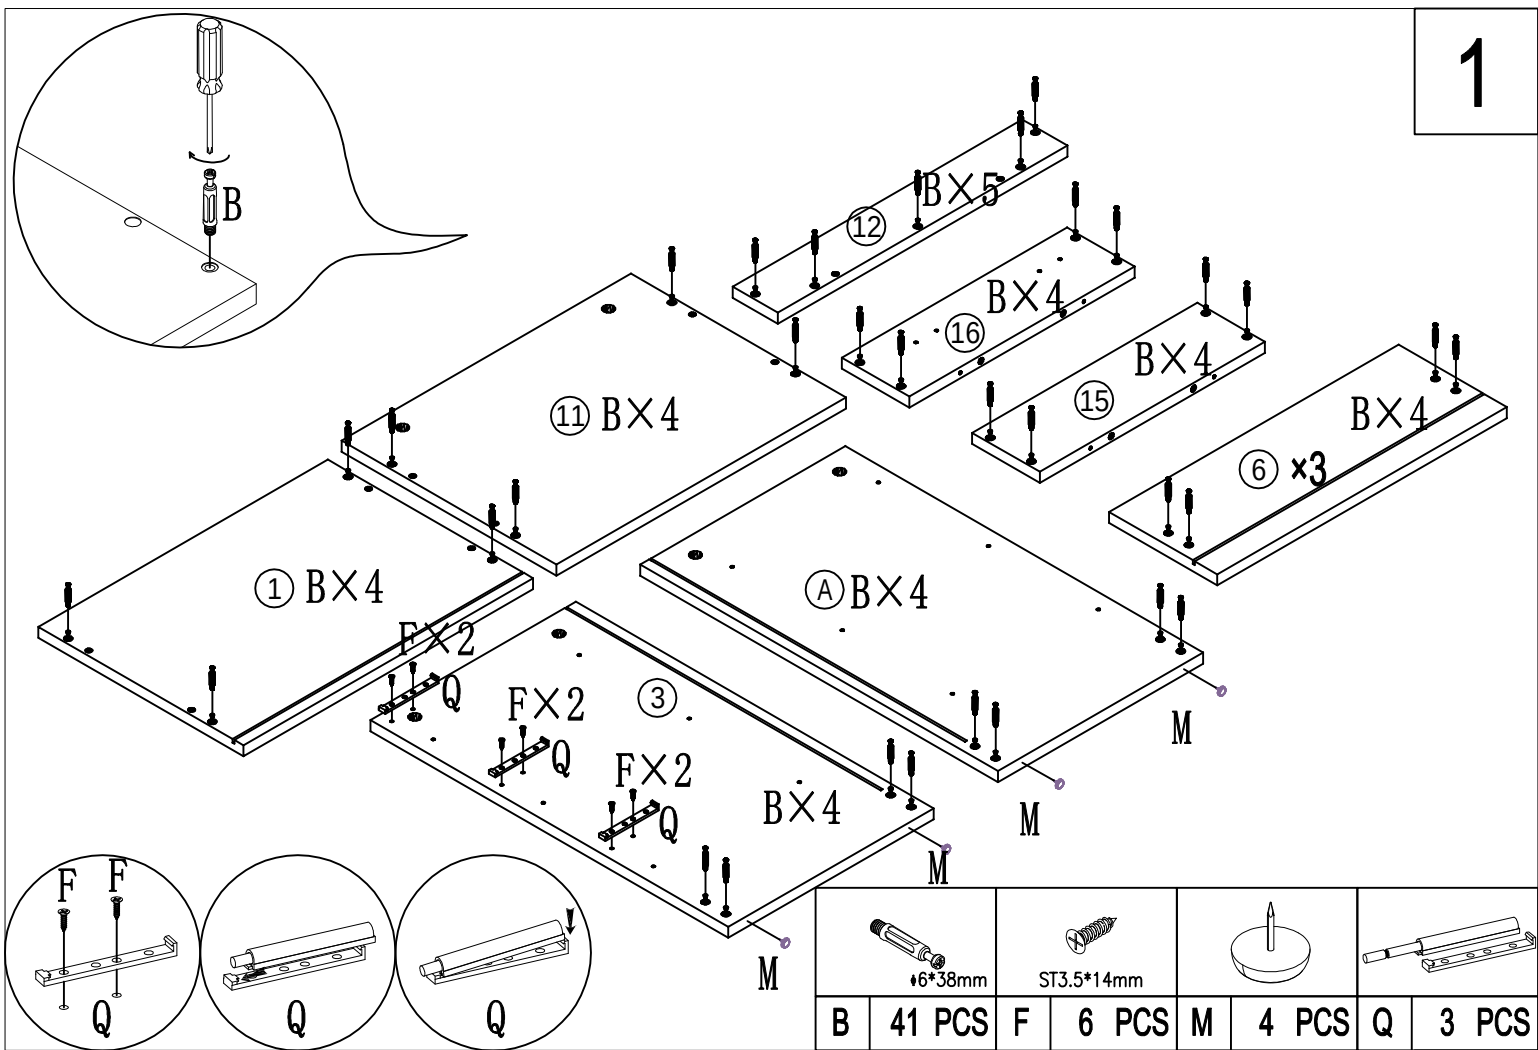

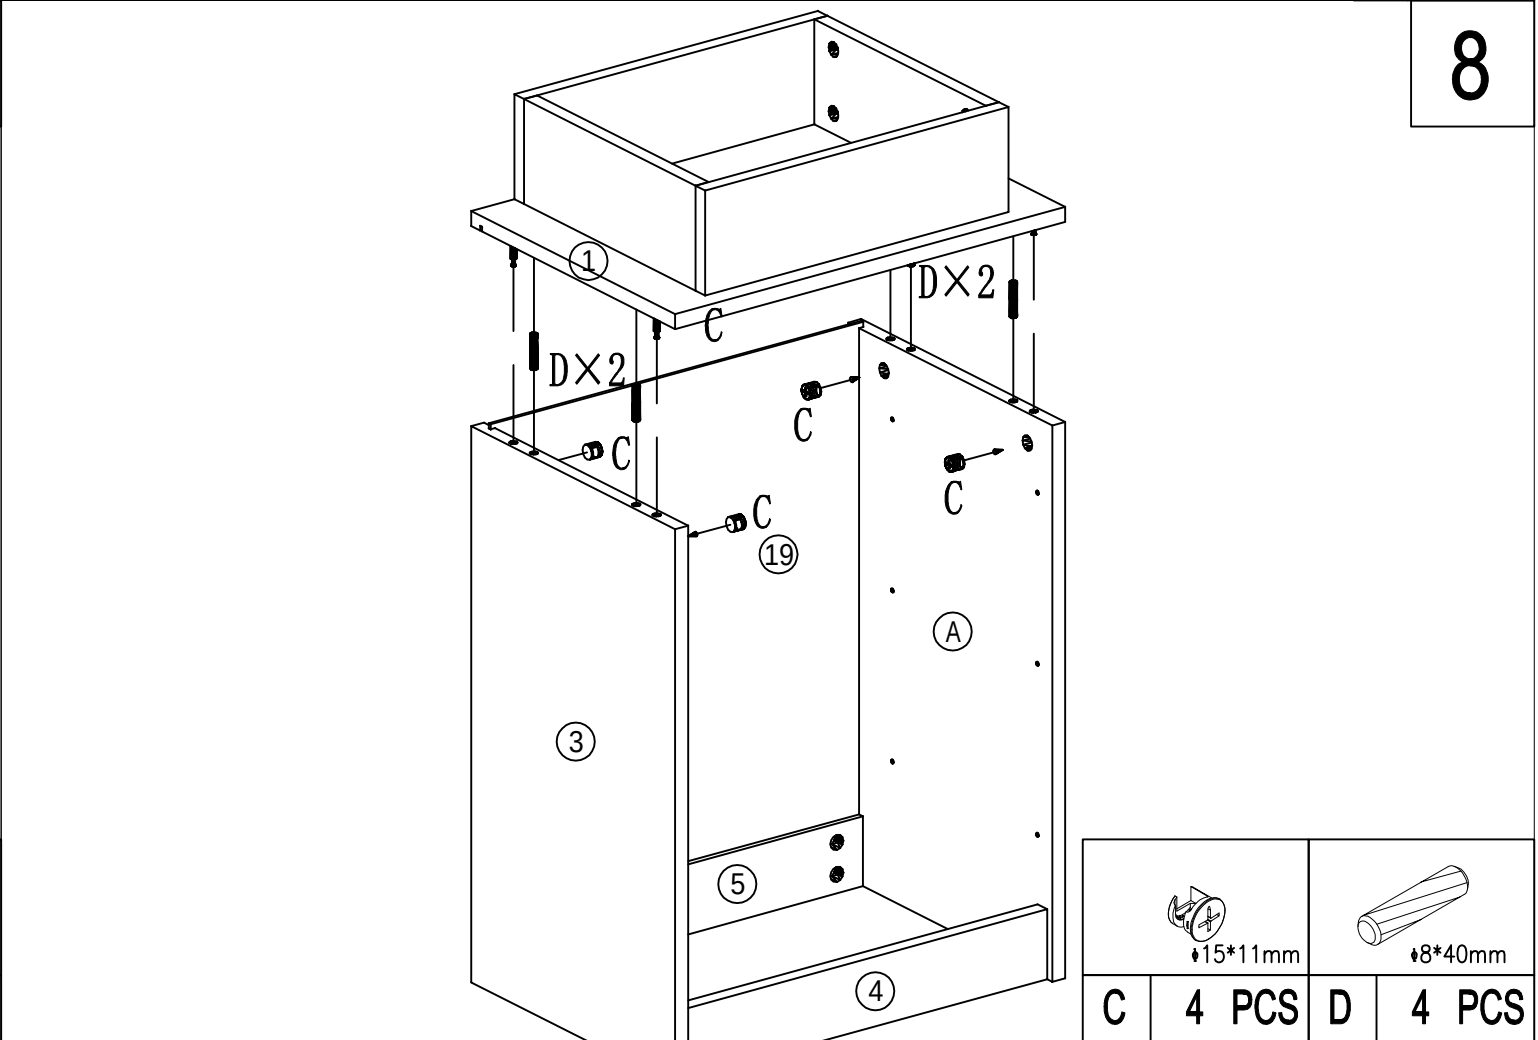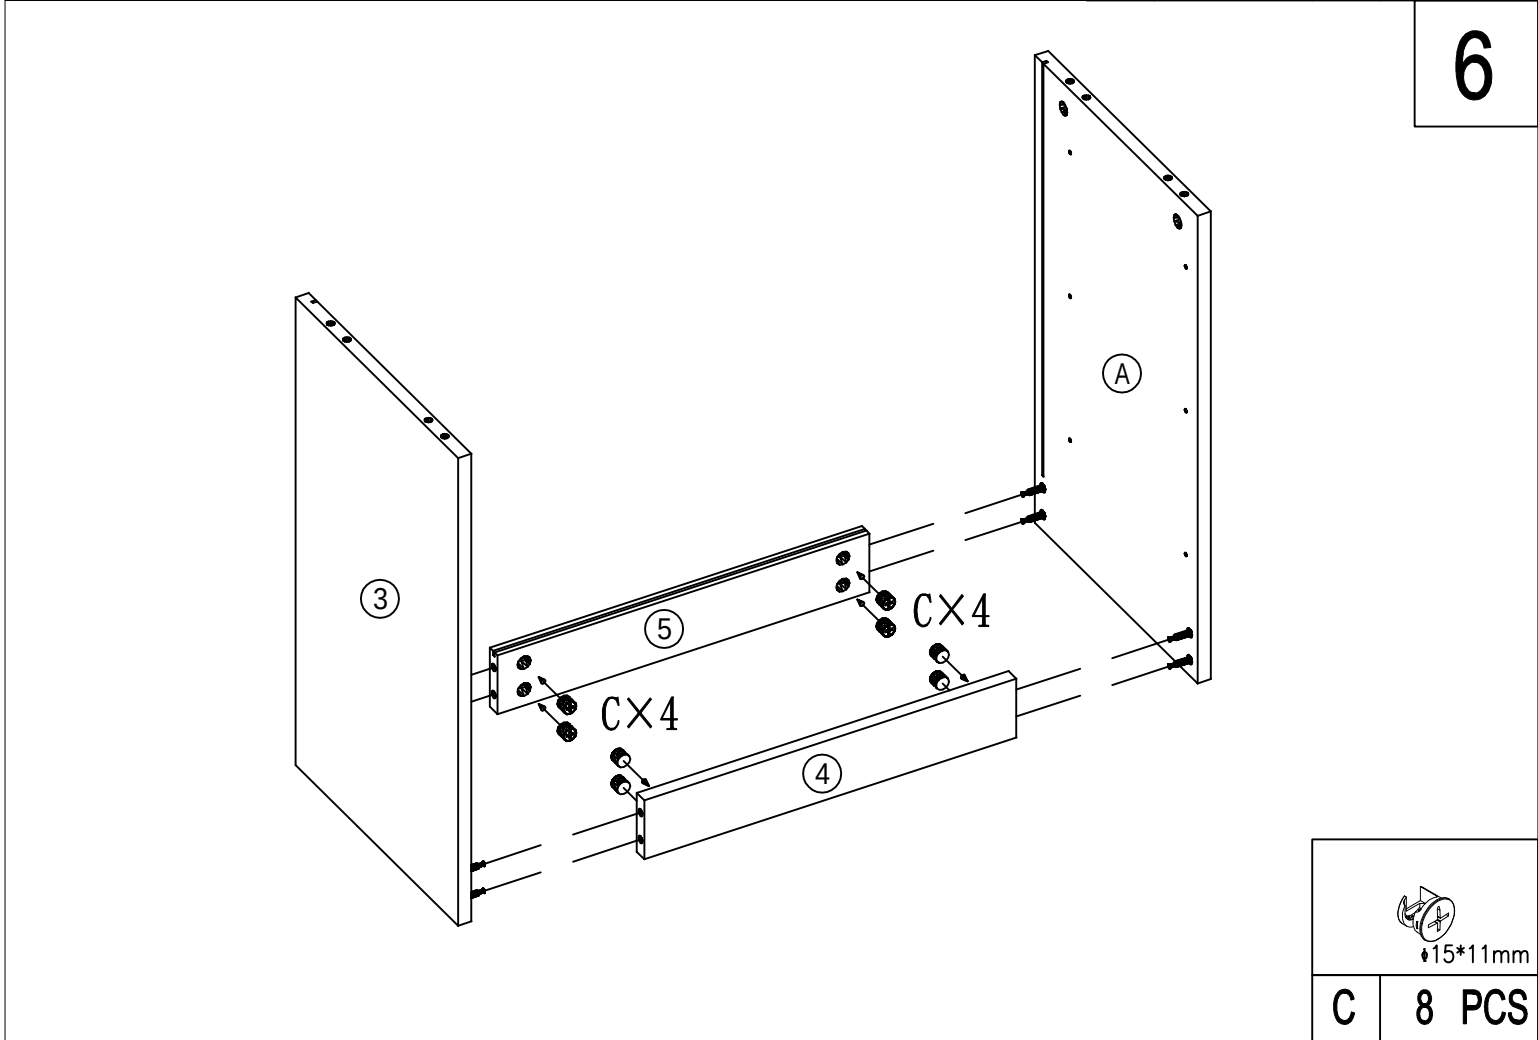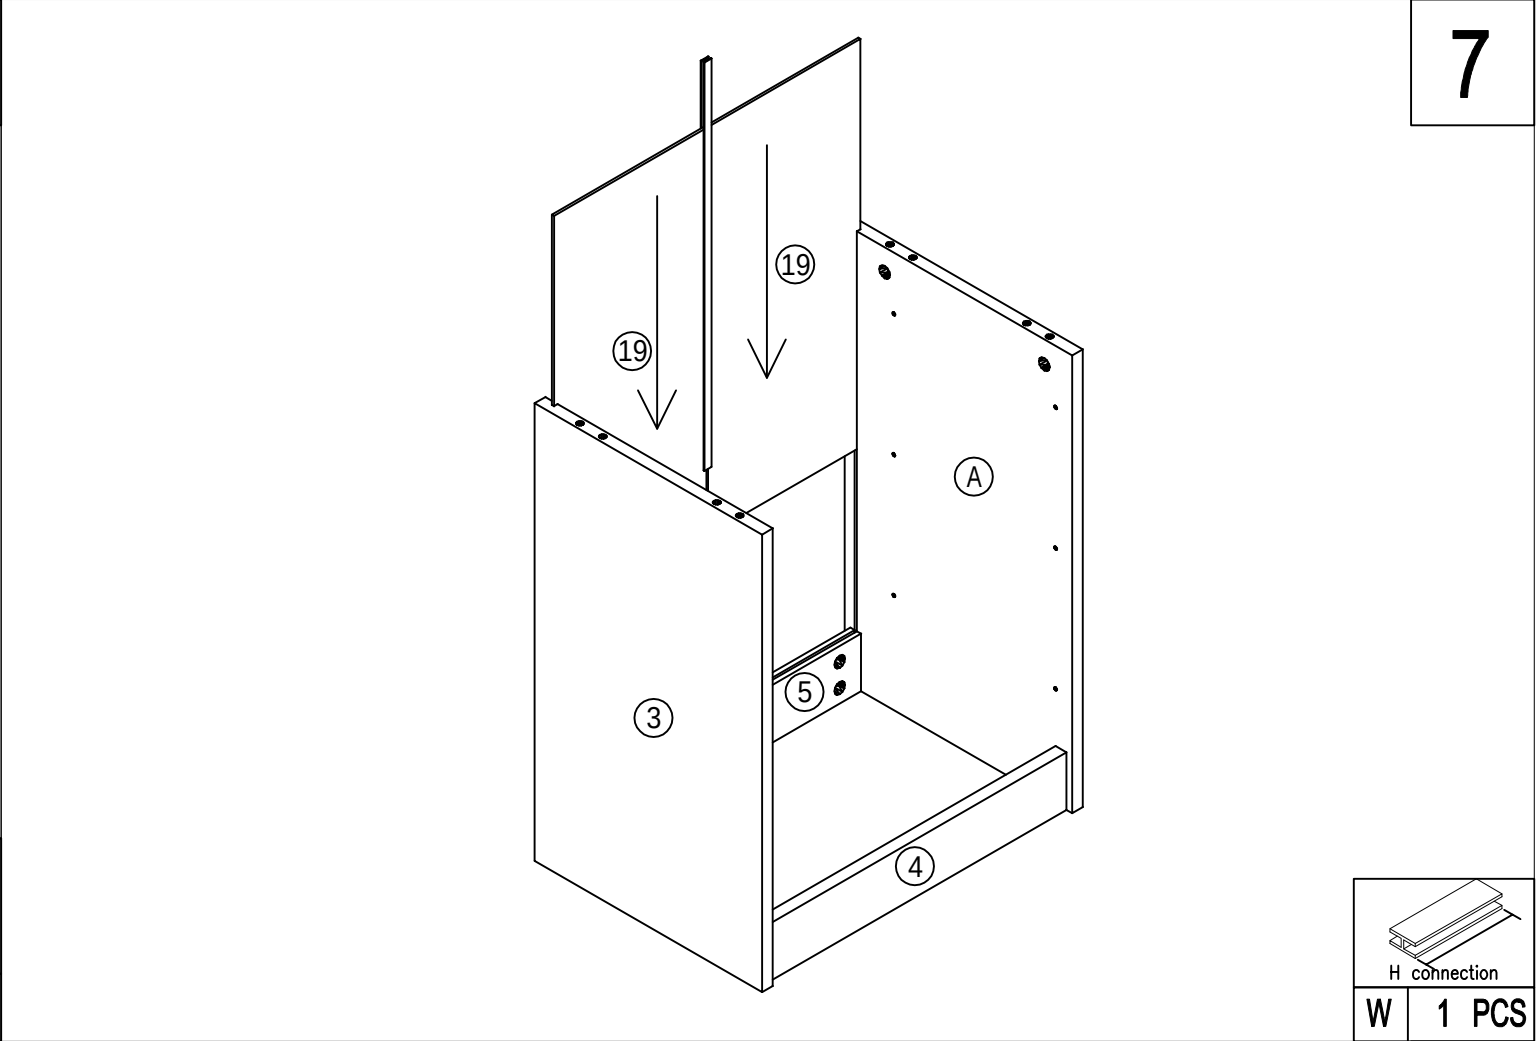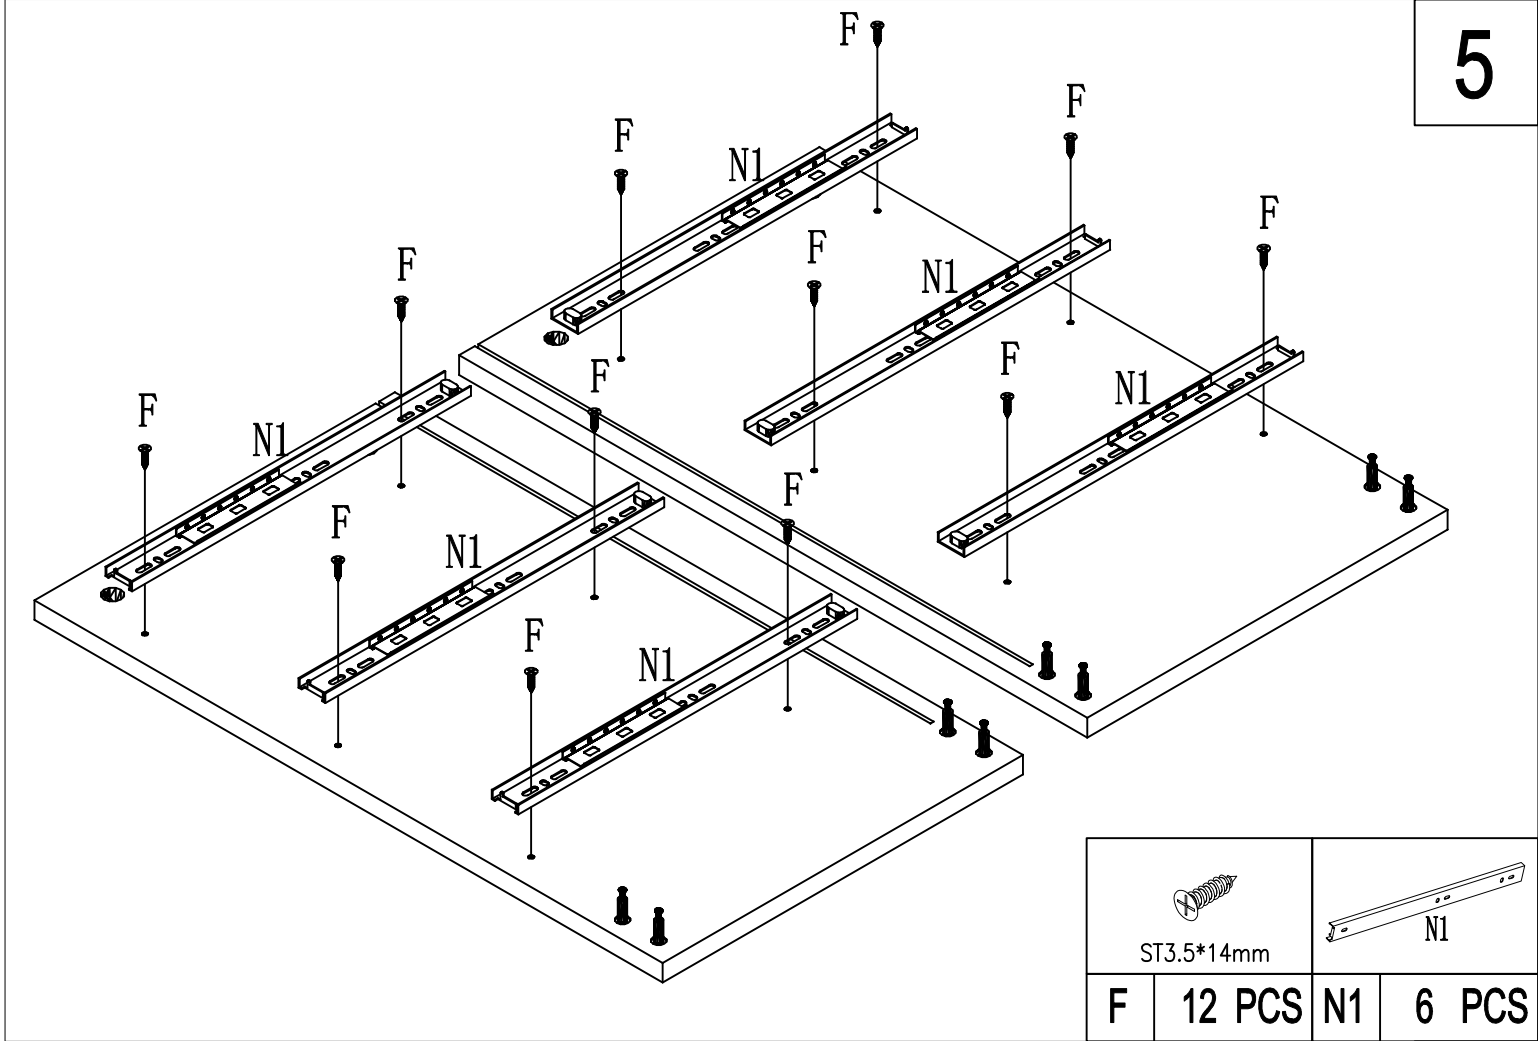



9

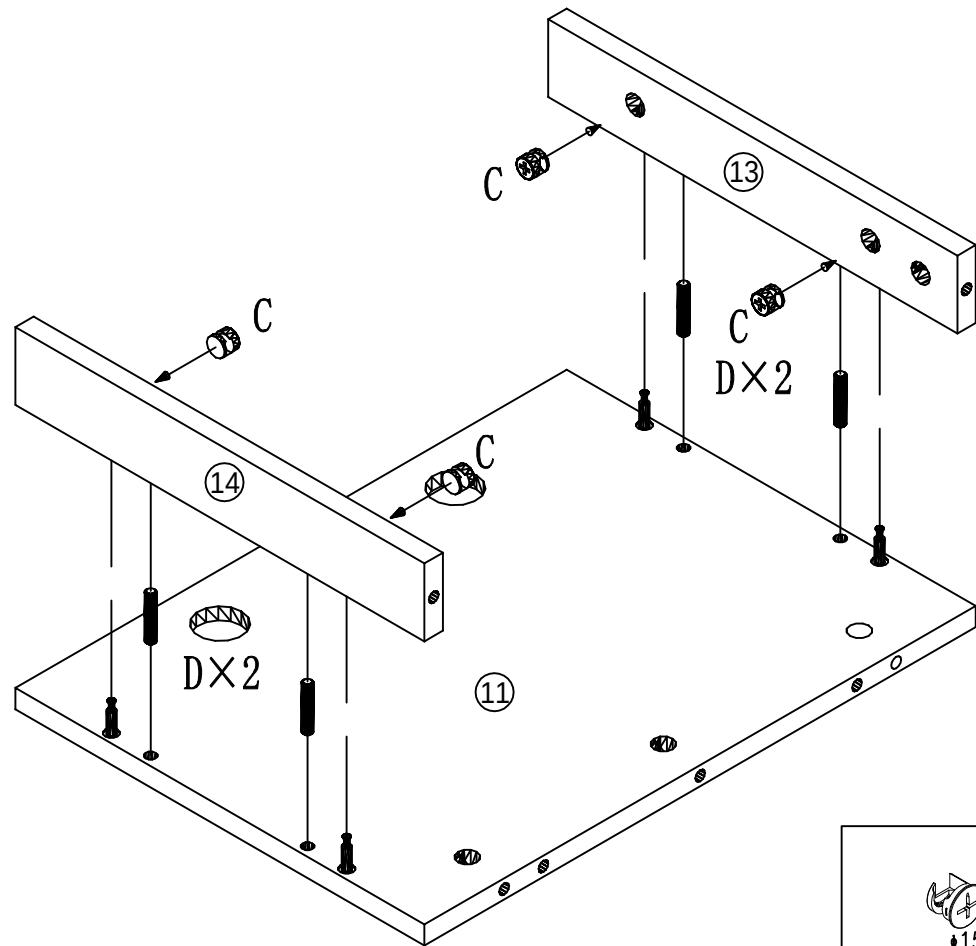 

 	
15x11mm	8x40mm
C	4 PCS
D	4 PCS

  
11

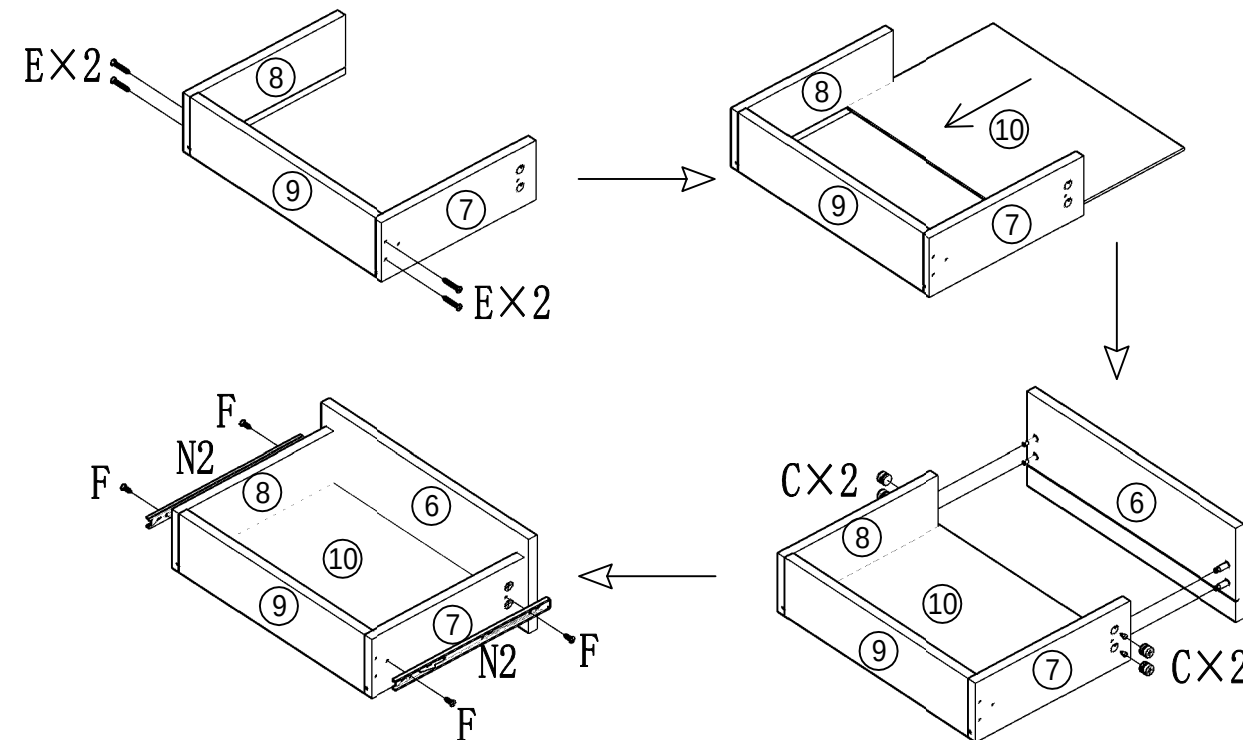


			
15x11mm	ST3.5x35mm	ST3.5x14mm	N2
C	12 PCS	E	12 PCS
F	12 PCS	N2	6 PCS


3 Drawers

  10

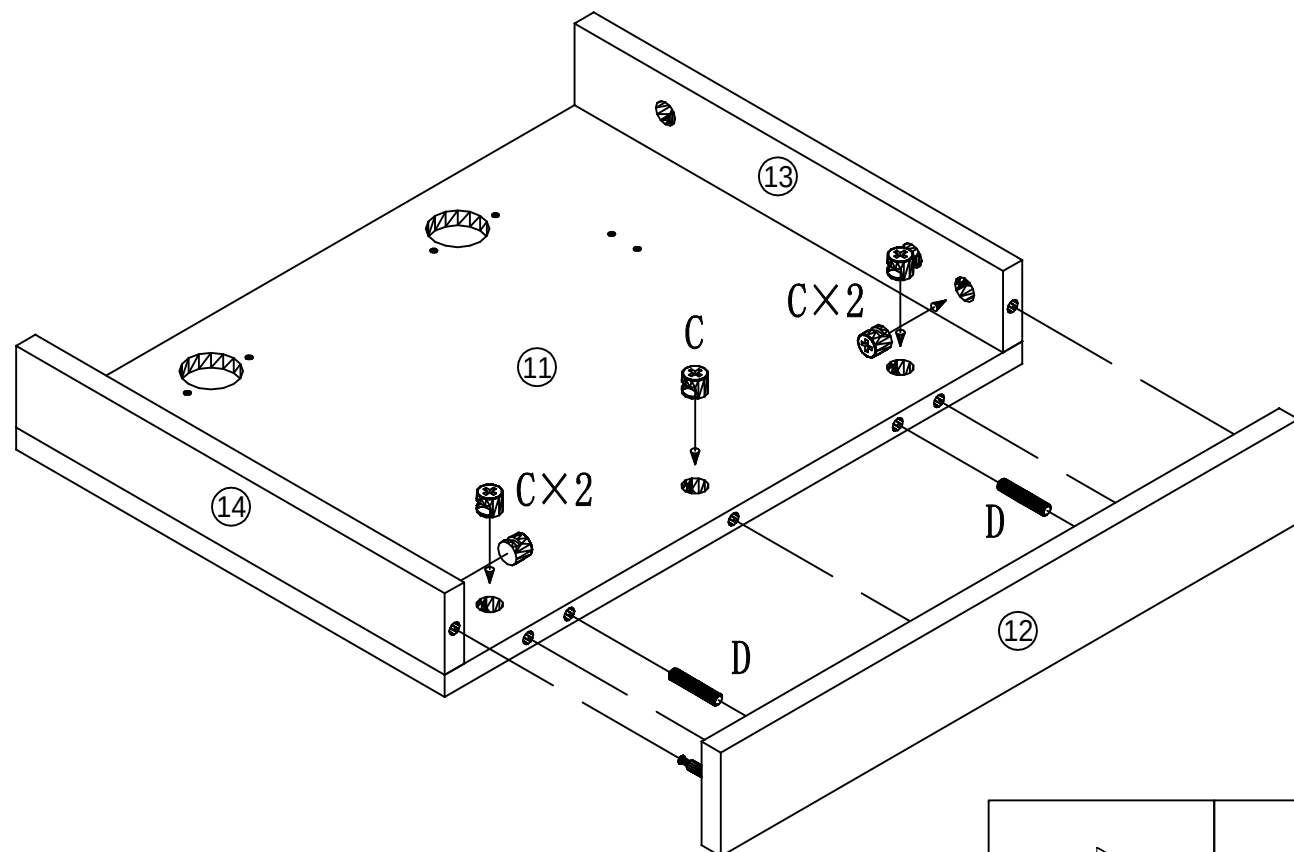

	
15x11mm	8x40mm
C	5 PCS
D	2 PCS

 
12

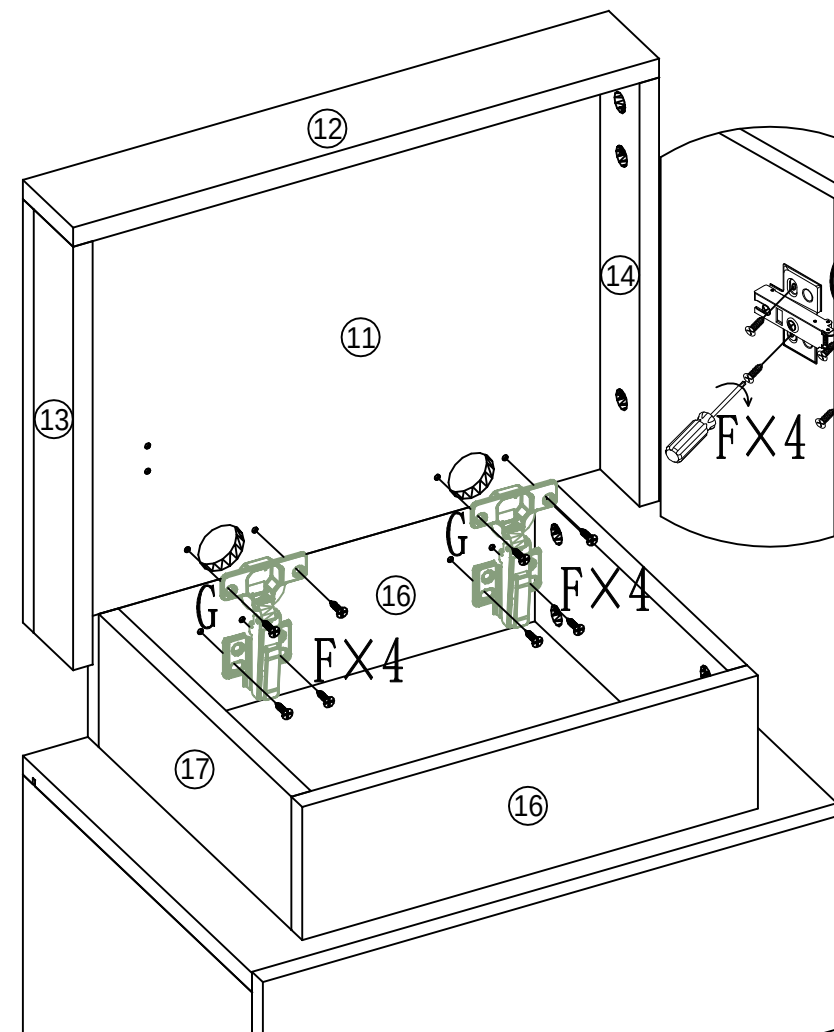

Hinge Adjustment

If the doors do not appear square or aligned, loosen or tighten the appropriate screws on each case hinge as illustrated.

 - 1) Side to side adjustment: Loosen screw A, adjust gap with screw B and re-tighten screw A.
- 2) Depth adjustment: Loosen screw A, push hinge arm forwards or backwards, re-tighten screw A and screw B with a 1/4 turn clockwise.
- 3) Height adjustment: Loosen screw C, adjust door height and re-tighten screw C.

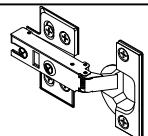	
ST3.5x14mm	
F	8 PCS
G	2 PCS

13

ST3.5x14mm	
F	4 PCS
H	1 PCS

15

ST3.5x14mm	
F	2 PCS
J	2 PCS
K	2 PCS

14

ST3.5x14mm	
F	4 PCS
R	4 PCS

16

WALL

380


420

Pre-drilled 2 holes at wall

L


L	2 PCS

 17

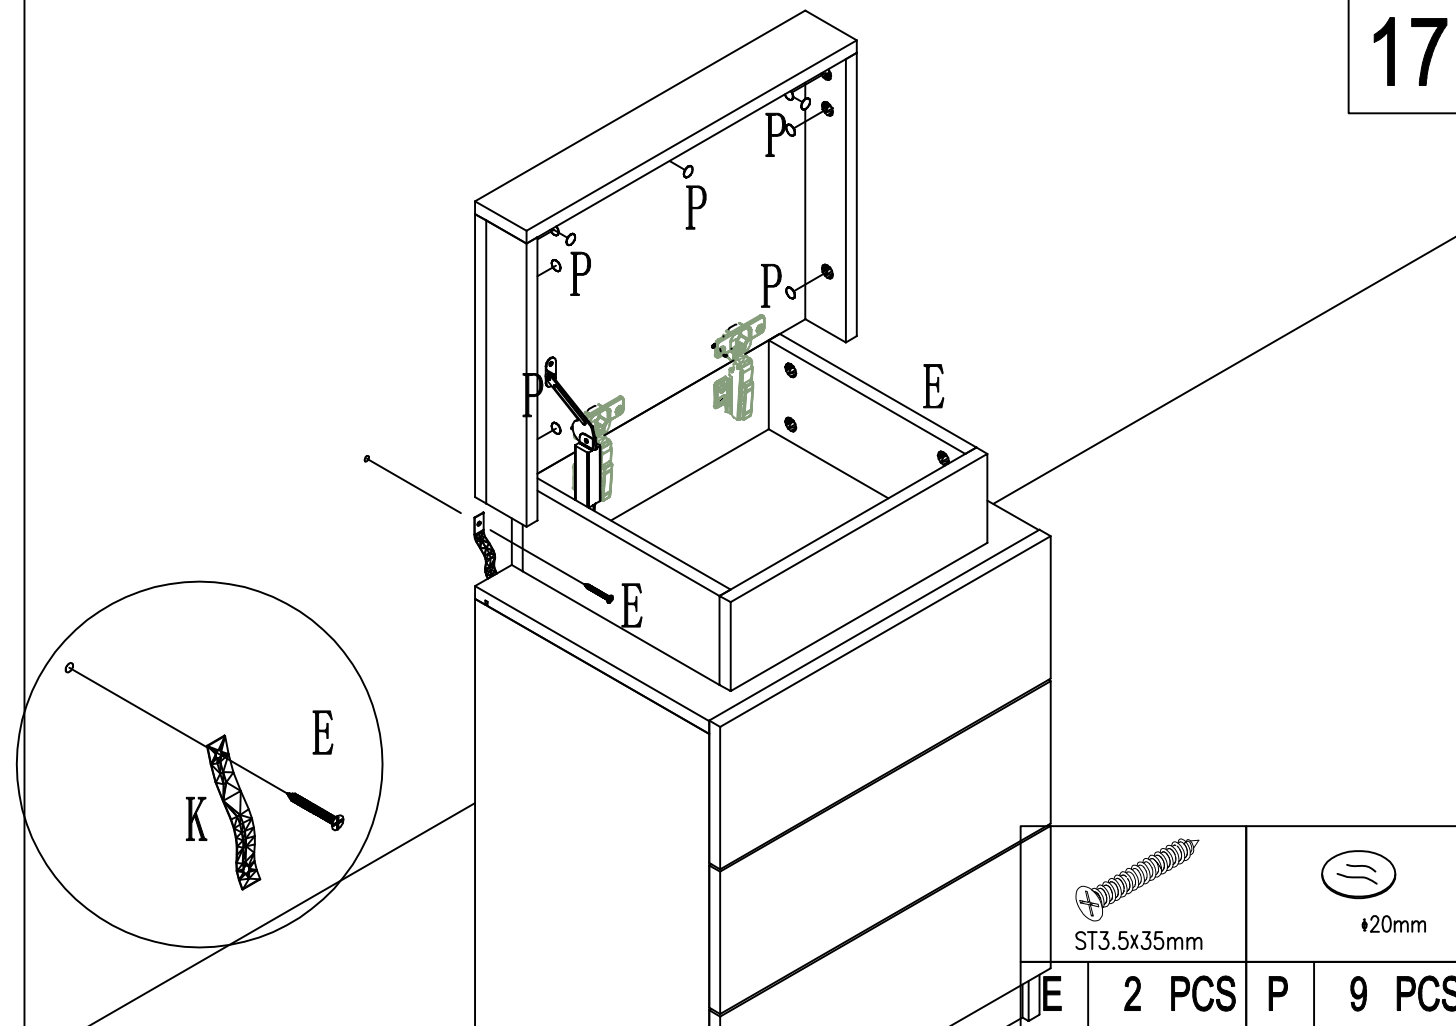

18

 Tear off the paper on the back of the LED tape and paste the LED tape on the cabinet along the arrow.

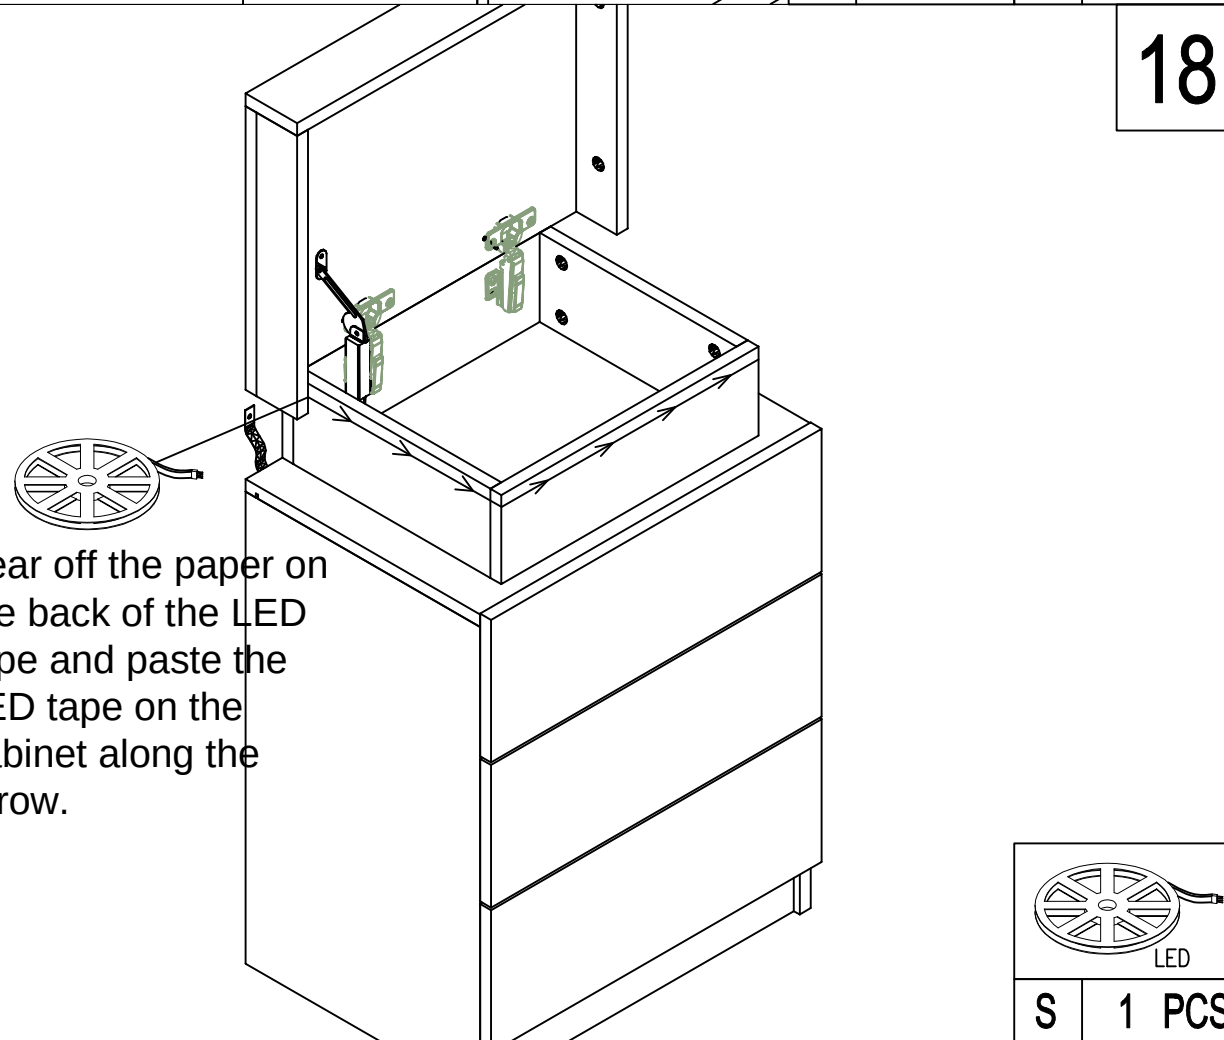

LED light

If you can't let the lights work successfully, please check the following:

1. Please check the direction of the connect, try it in the opposite direction, according to the following picture.
2. Please check the remote control, it need you to tear down the plastic septum before use it.
3. Don't let the remote control too far from the receiver, make sure there is no obstruction between them.

