

<b>A</b>  40x30cm 40pcs	<b>B</b>  30x30cm 16pcs	<b>C</b>  40x30cm 12pcs	<b>D</b>  32pcs	<b>E</b>  40pcs	<b>F</b>  1pcs	<b>G</b>  1pcs
----------------------------------	----------------------------------	----------------------------------	-----------------------	-----------------------	----------------------	----------------------

**STEP 1**

Ax3

Ex8

**STEP 2**

Bx4

**STEP 3**

Dx8

**STEP 4**

Ax3

**STEP 5**

Ax3

Ex8

**STEP 6**

Ax3

**STEP 7**

Cx3

**STEP 8**

Ex8

Ax9

Cx3

Dx8

Bx4

STEP 9



Ex8



Ax9




Cx3



Dx8



Bx4

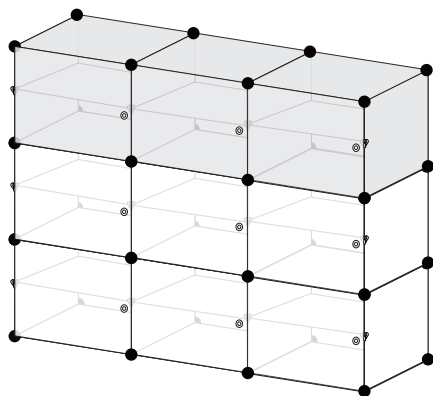

STEP 10



Ex8



Ax9




Cx3





Dx8




Bx4

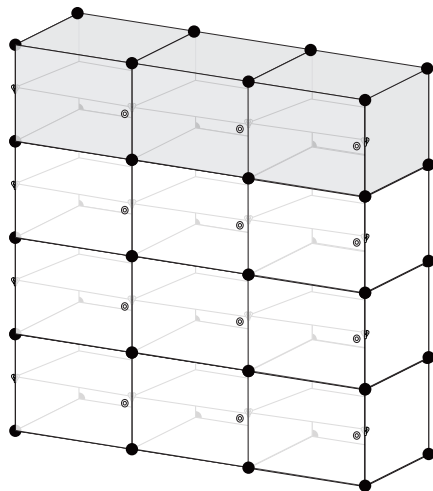

STEP 11

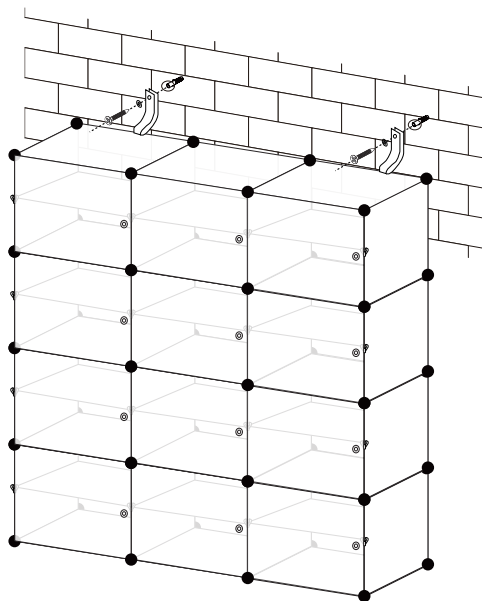

FINISHED

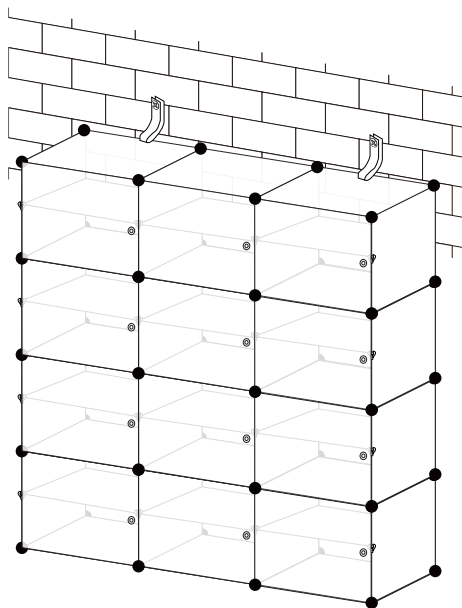

When you start to assemble, make sure each panel is well inserted into the bottom of the connector, so you can get highest stability.

