








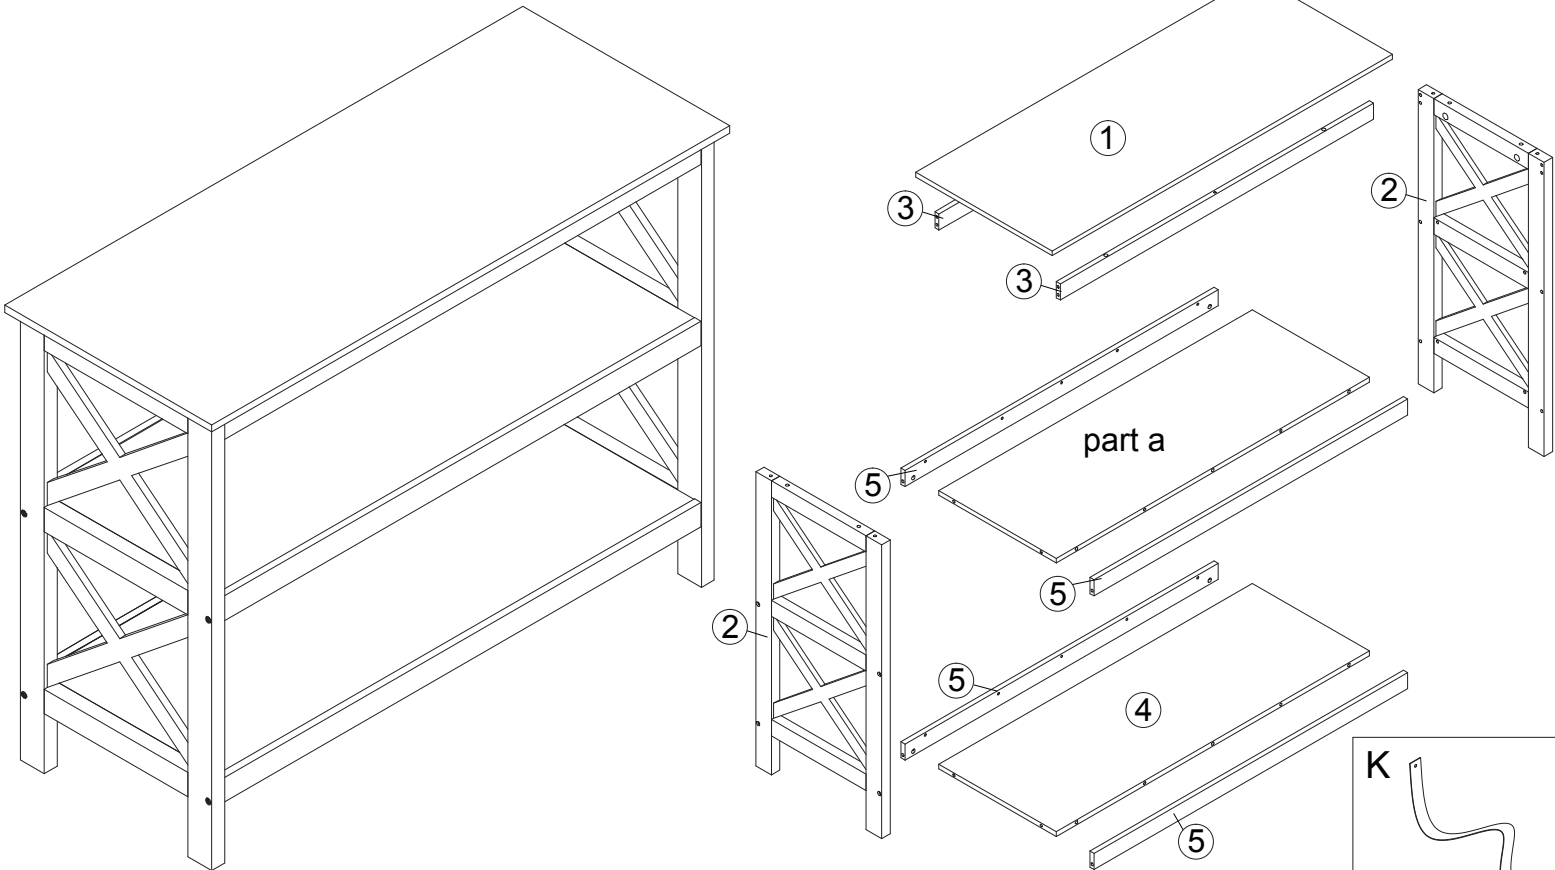



MODEL:FURNI-F-TTAB-01-WH



A  M6x35mm 16pcs	B  Ø15x10mm 16pcs	C  Ø6x30mm 32pcs	D  Ø6x50mm 8pcs	E  Ø10x10mm 8pcs	F  Ø4x35mm 2pcs	G  1pc	H  2pcs	I  Ø4x10mm 1pc	J  Ø3.5x35mm 1pc
--	---	--	---	---	---	---	--	--	--

Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools.
Do not use power tools.



Identify and lay out all of the components before you begin assembly.

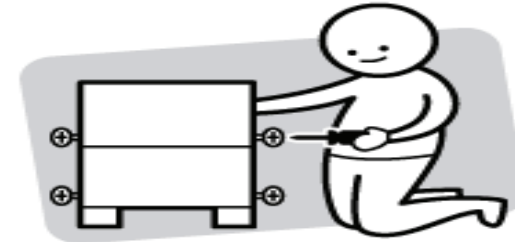

Do not fully tighten all screws until step/
process finished.


Useful Information

! Never use power tools, they can damage your components or hardware if used incorrectly.


! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.


Step 1

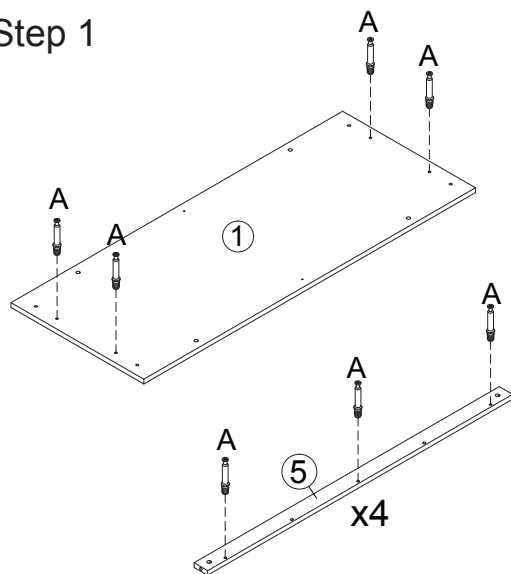


Step 2

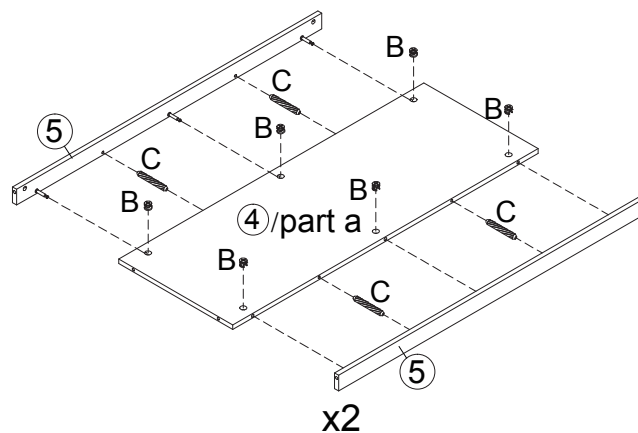


Step 3

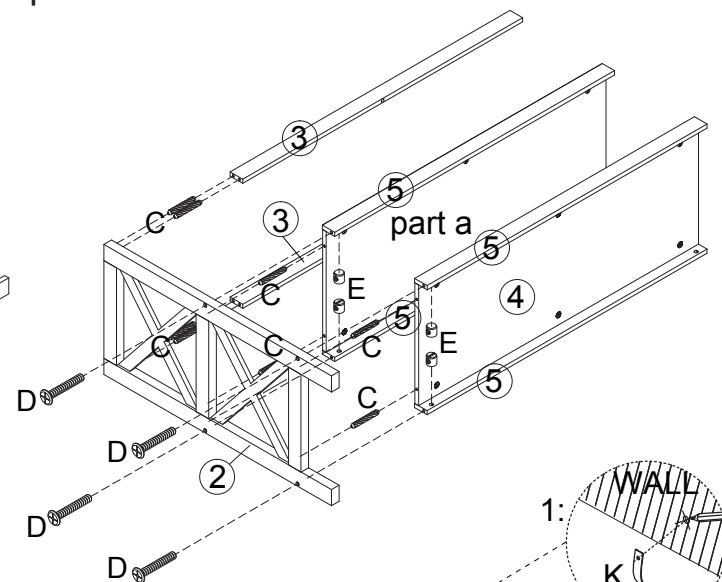


Step 4

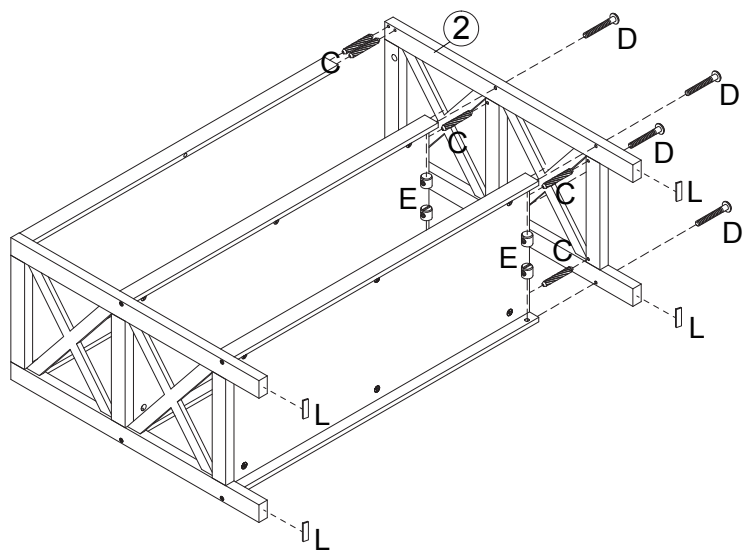

Step 5

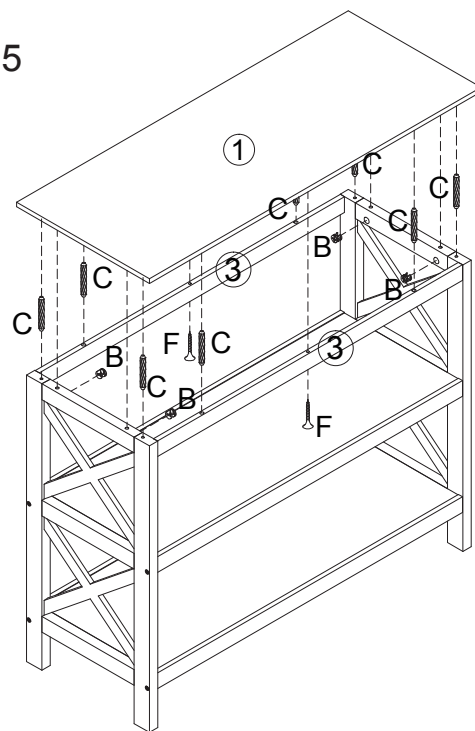

Step 6

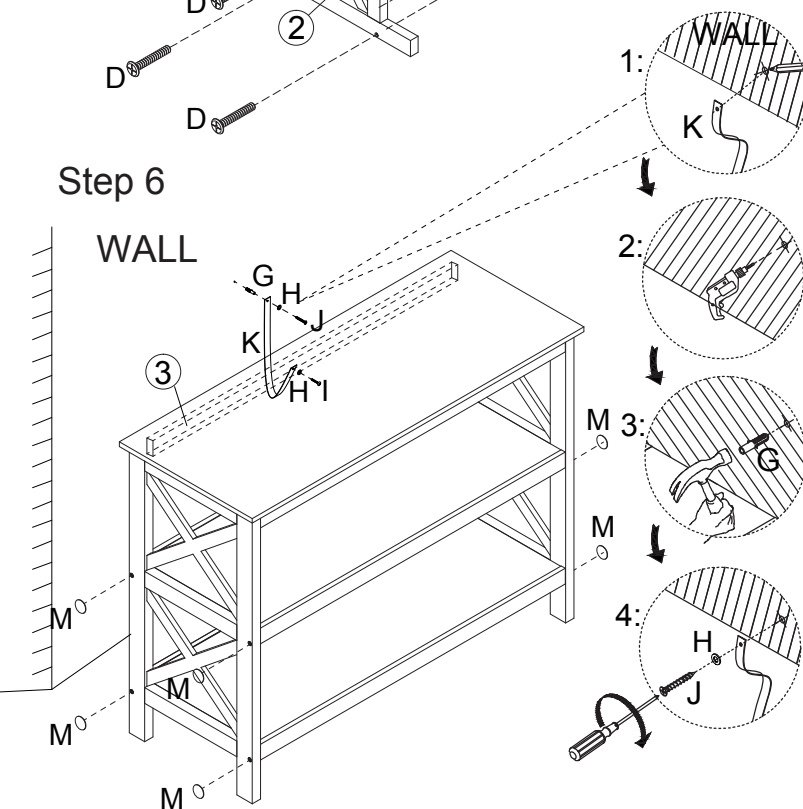

It is strongly recommended to mount the cabinet to the wall with supplied mounting parts. Otherwise, please skip this step.