




MODEL: WBED-D-03KS-107

Version 1.1

BED WITH TRUNDLE

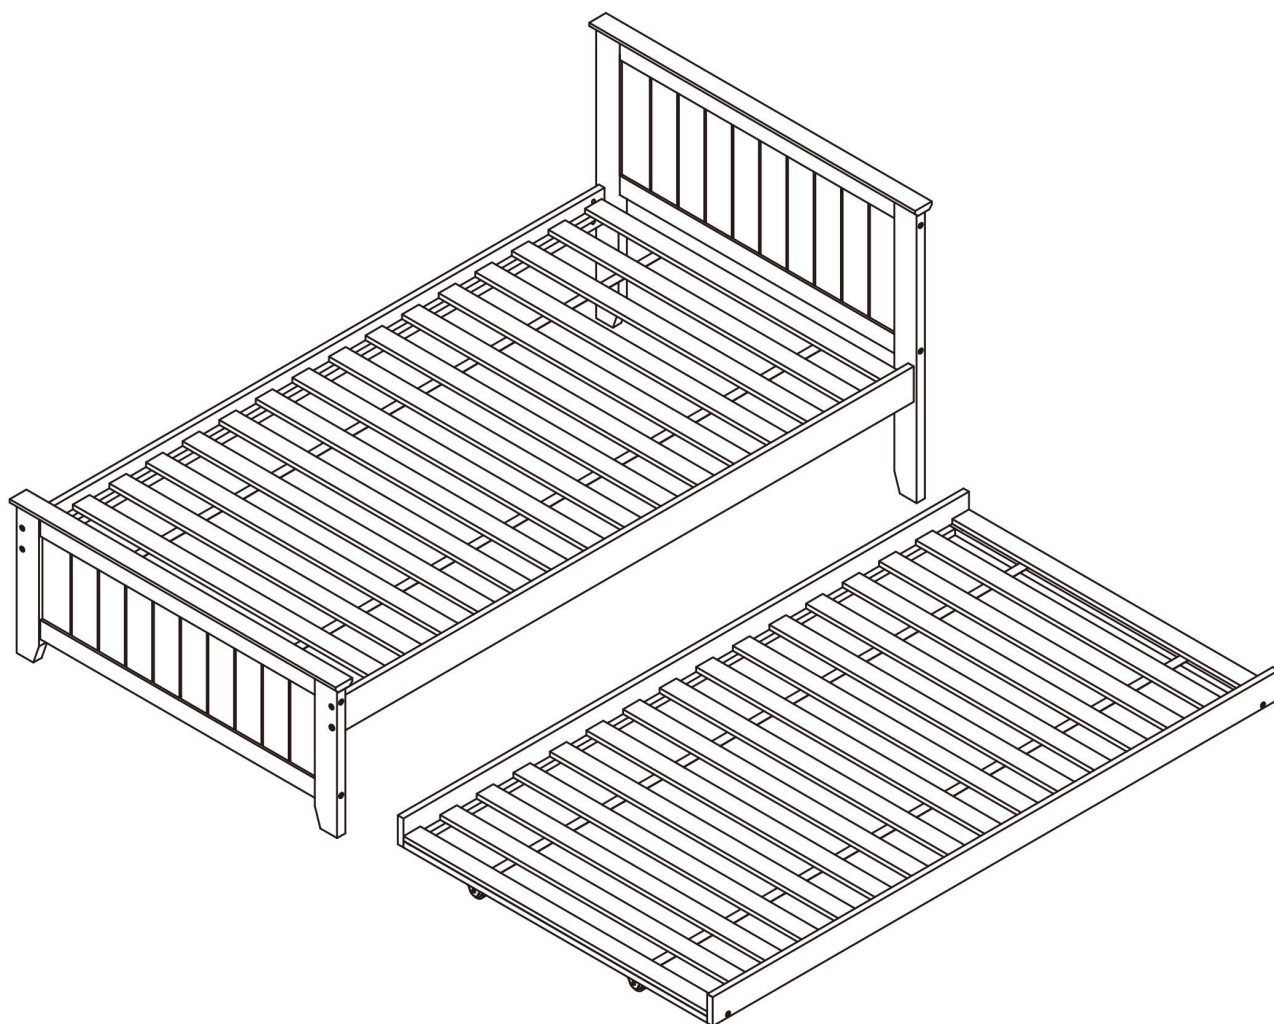

TWO PEOPLE

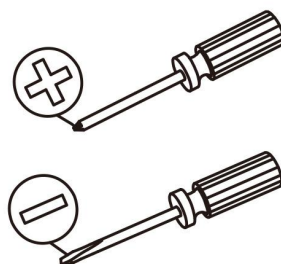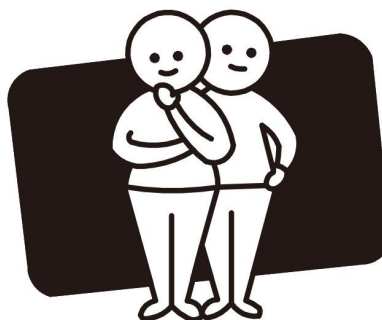

REQUIRED


Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools.
Do not use power tools.

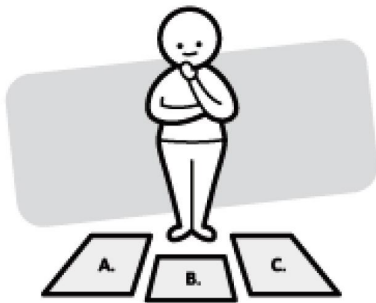

Identify and lay out all of the components before you begin assembly.

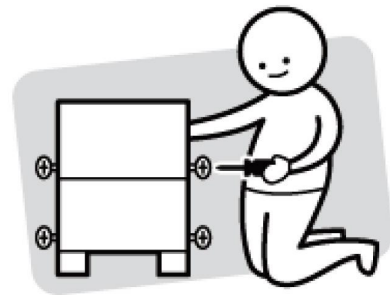

Do not fully tighten all screws until step/ process finished.


Useful Information

! Never use power tools, they can damage your components or hardware if used incorrectly.









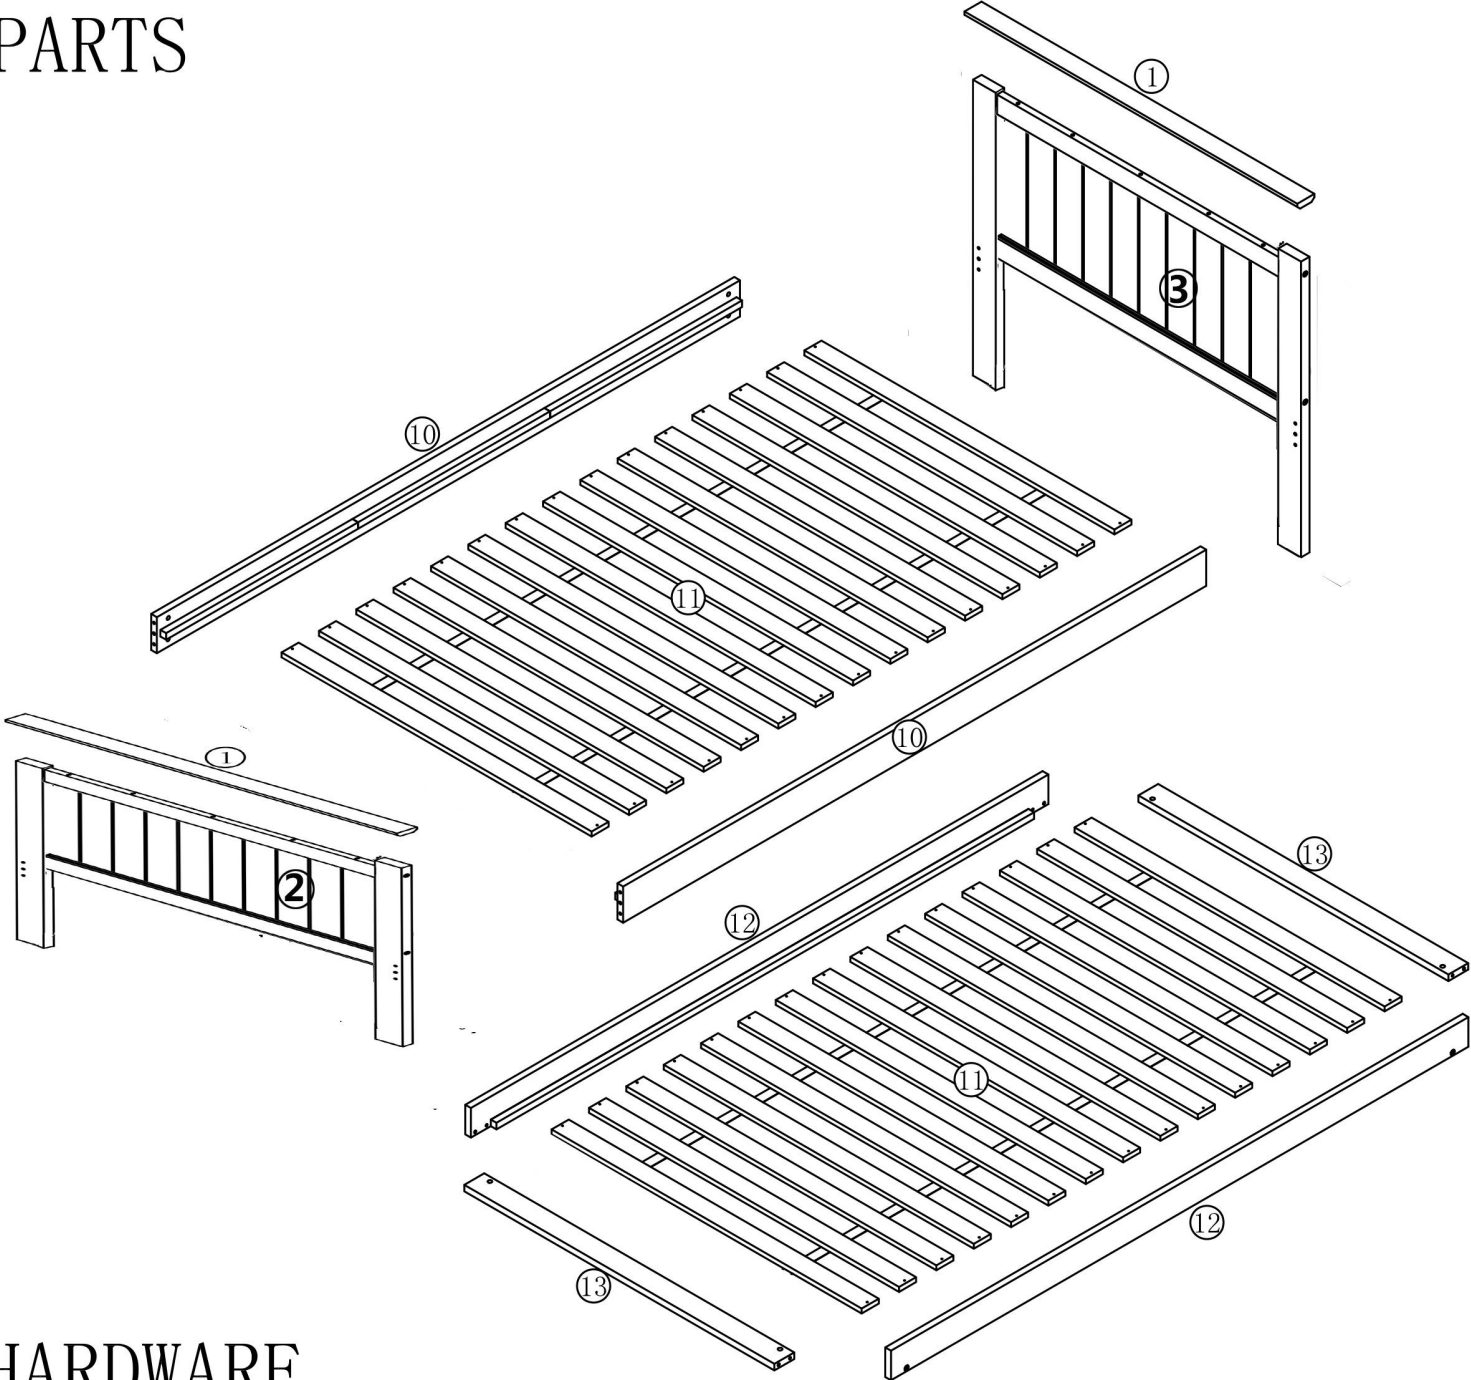
! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.


PARTS




HARDWARE

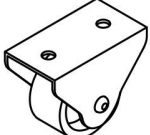A	x1	B	x 12	C	x 12	D	x 60	E	x8
 M4		 Ø12x10mm		 Ø8x30mm		 Ø3. 5x30mm		 Ø3. 5x16mm	
F	x6	G	x6	H	x12	K	x4		
 Ø6x44mm		 Ø15x12mm		 M6x70mm		 40x37x20mm			


STEP 1

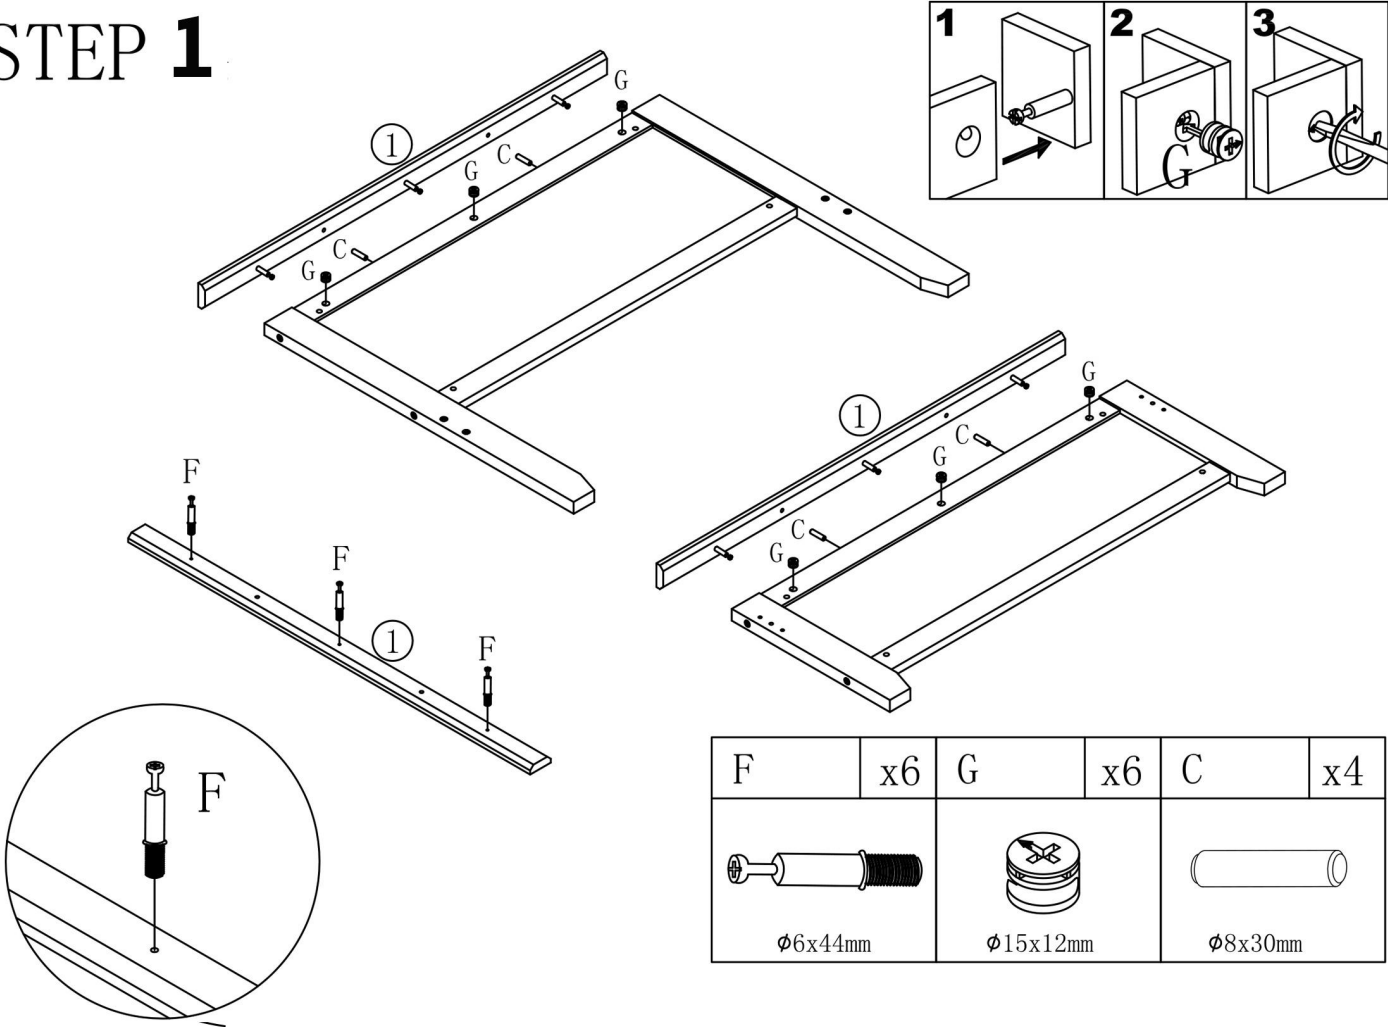


STEP 2

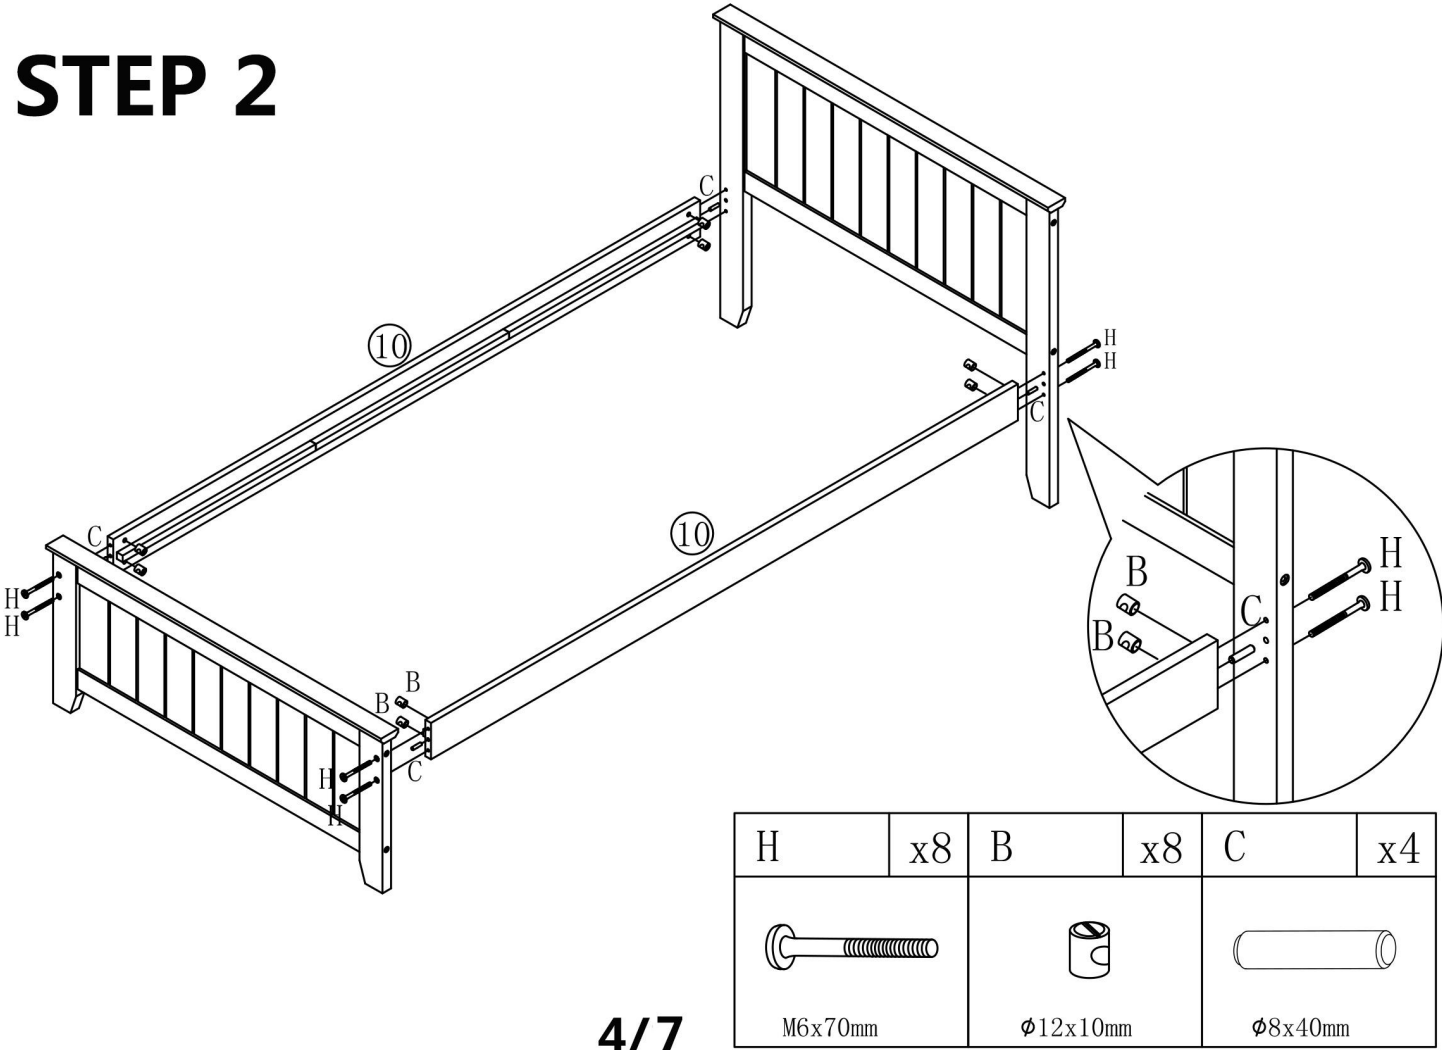





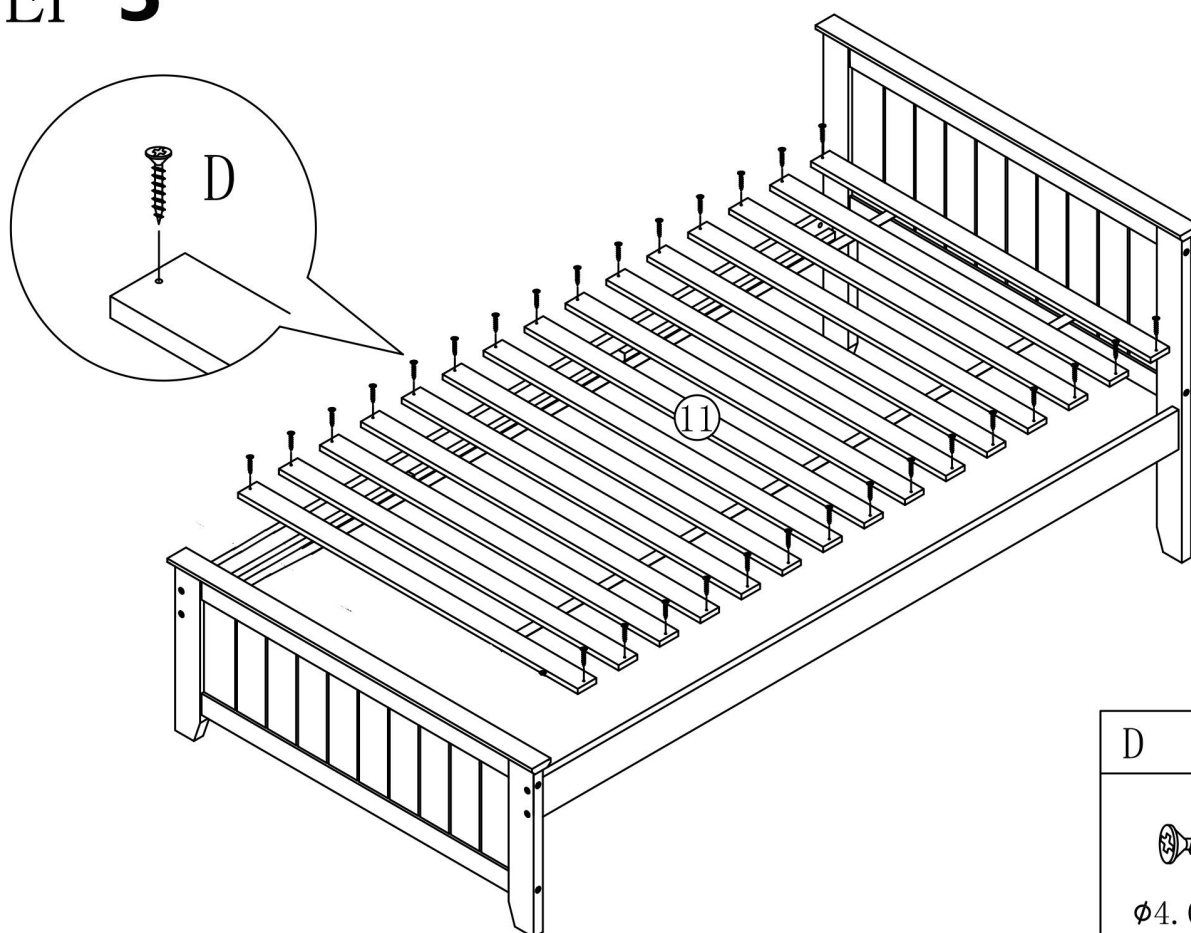

STEP 3

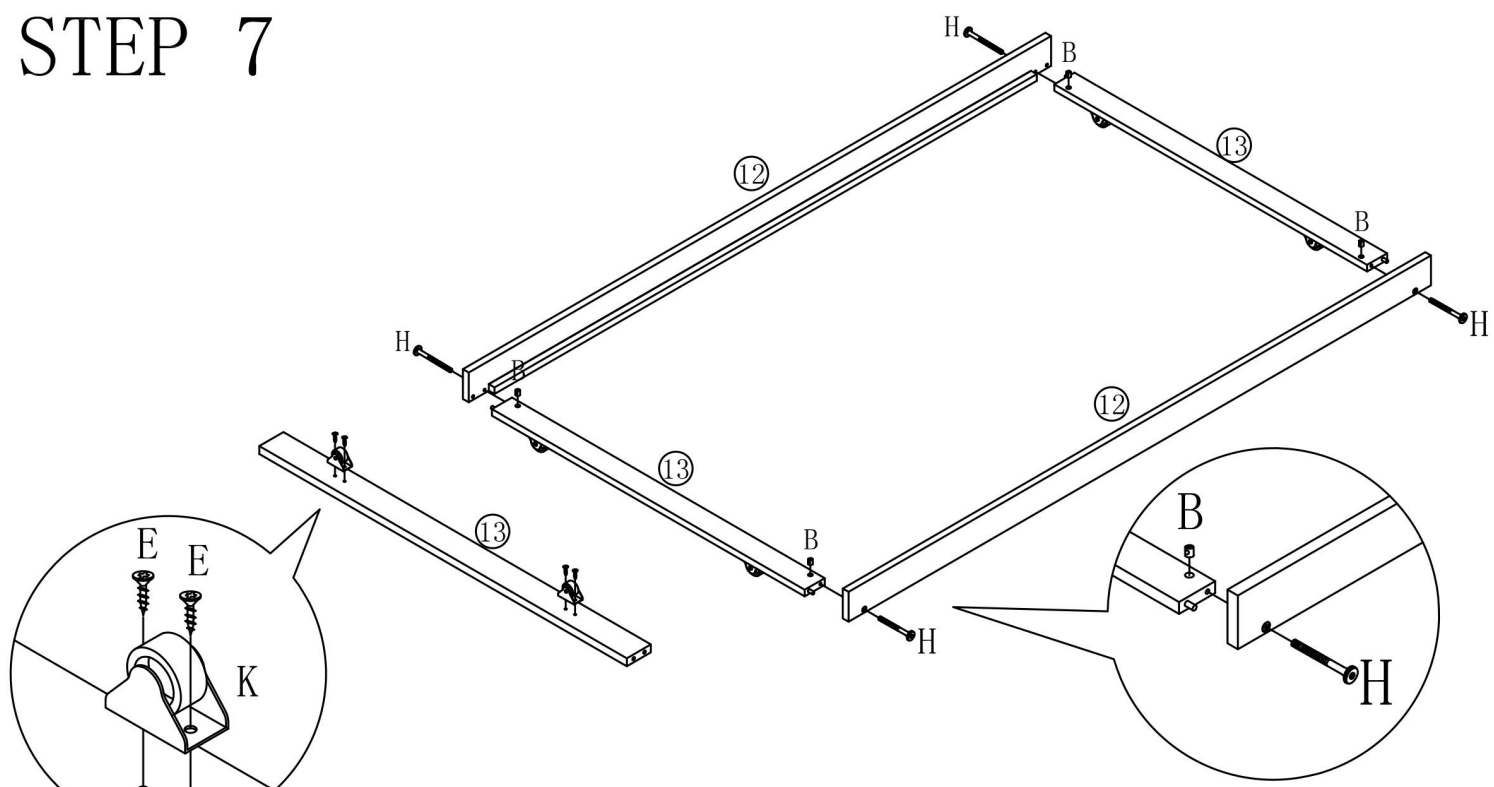


D	x30
	
Ø4.0x30mm	


STEP 7




H	x4	B	x4	C	x4	E	x8	K	x4
									
M6x70mm		Ø12x10mm		Ø8x30mm		Ø4.0x16mm		40x37x20mm	

STEP 8

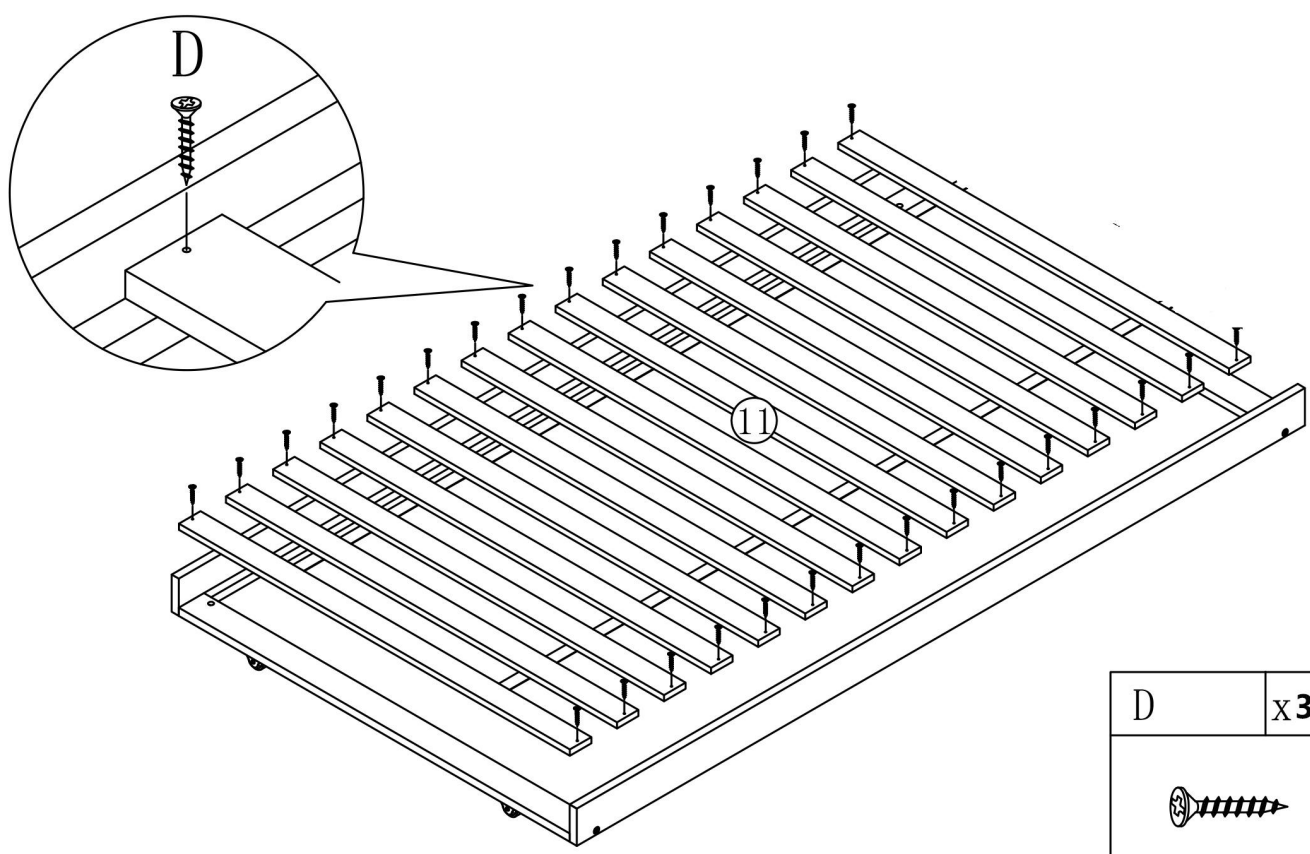

D	x30
	
Ø4.0x30mm	

STEP 9

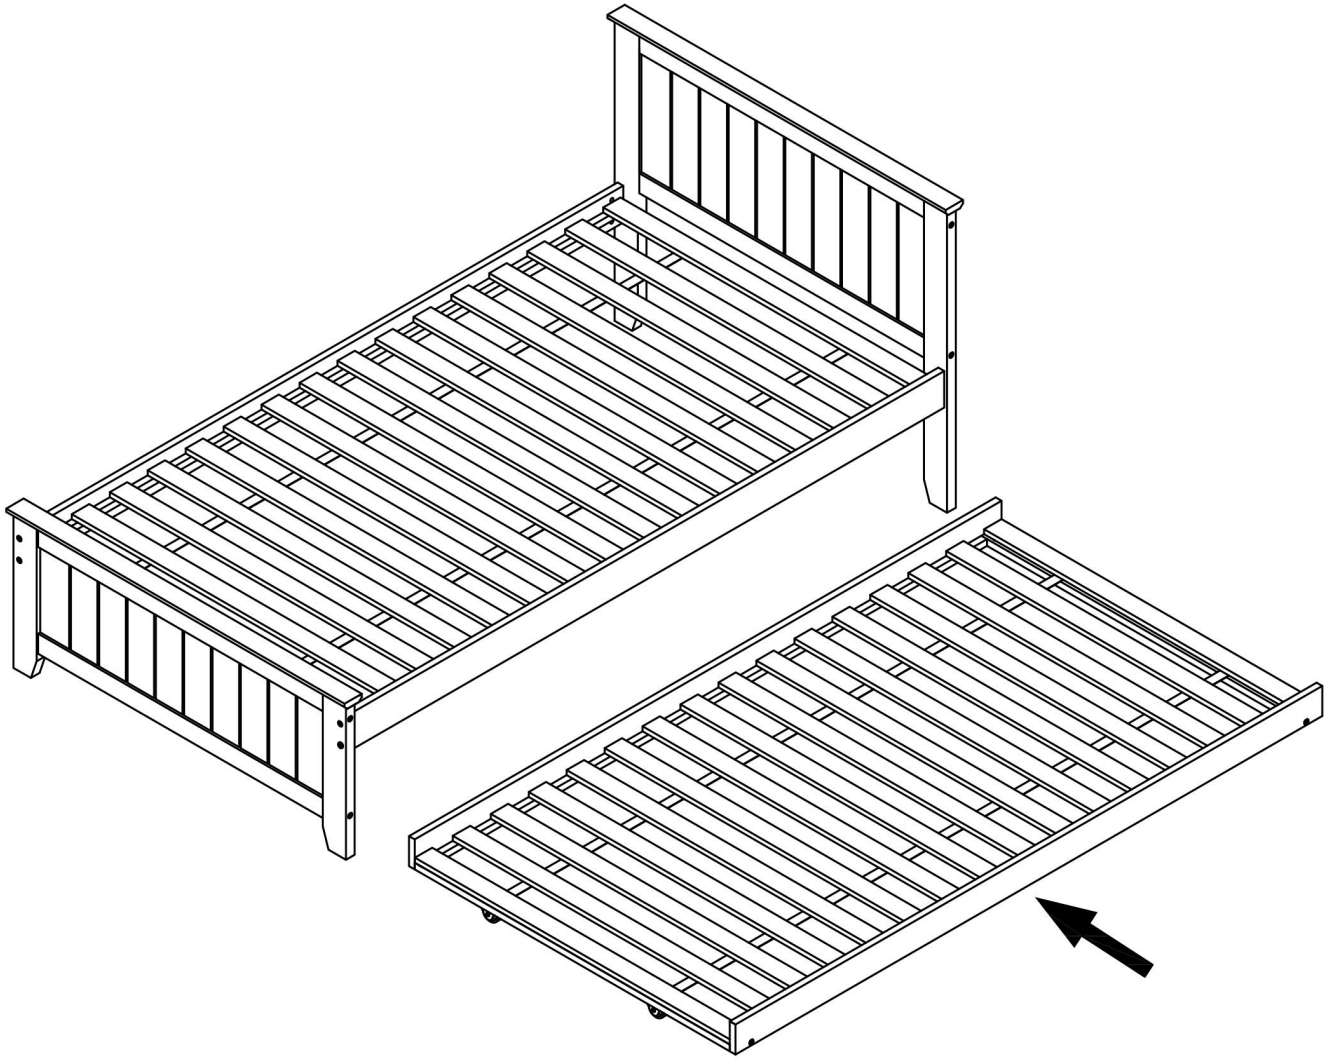

JOB COMPLETE

THANK YOU FOR YOUR PURCHASE !