
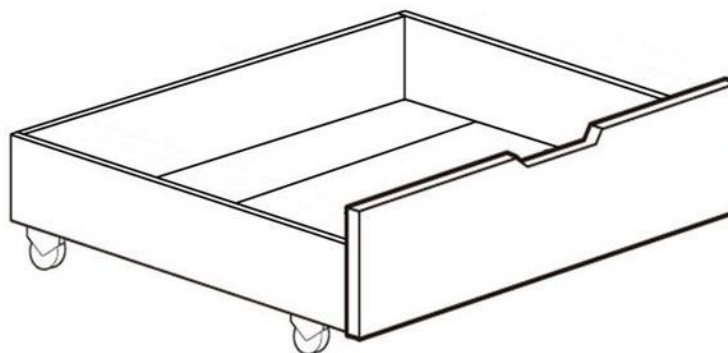






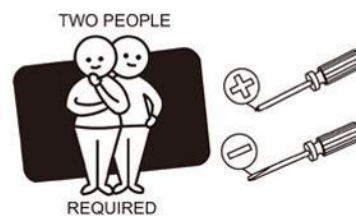



MODEL:WBED-D-DRAW03-WHX2

Version 1.0

Wooden trundle drawers



A	 Wood dowel	4
B		4
C	 C1  C2	C1:6 C2:6
D		4
E		8


Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools.
Do not use power tools.

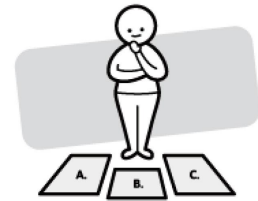

Identify and lay out all of the components before you begin assembly.

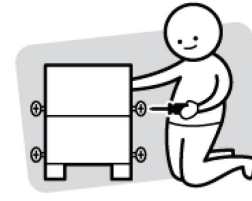

Do not fully tighten all screws until step/
process finished.

Useful Information


! Never use power tools, they can damage your components or hardware if used incorrectly.

! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.


! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.

! Never use any glue until you are certain that the parts belong together.

Drawer Part List

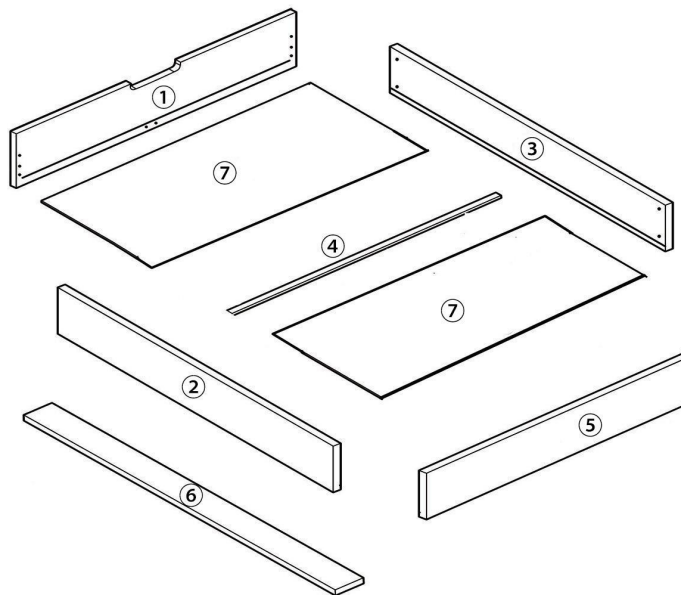

Step 1

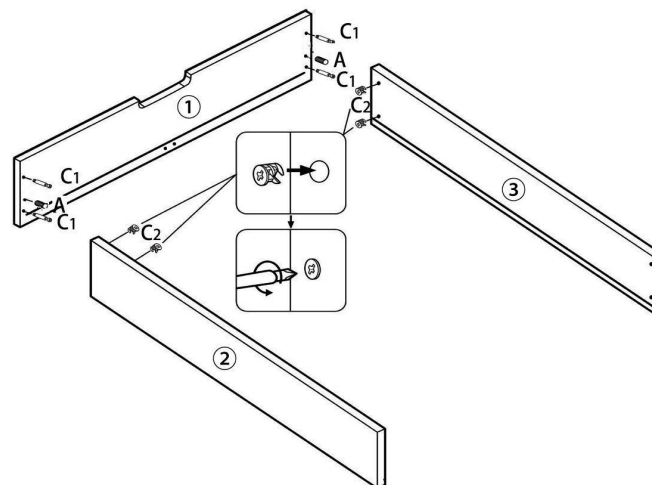


Use the wooden connectors (**Part A**) and bolts (**Part C**) to combine the side (**Part 2&3**) with the front board of the drawers (**Part 1**).


Phillips-head (Crosshead) screwdriver is required.

Instructions

Step 2

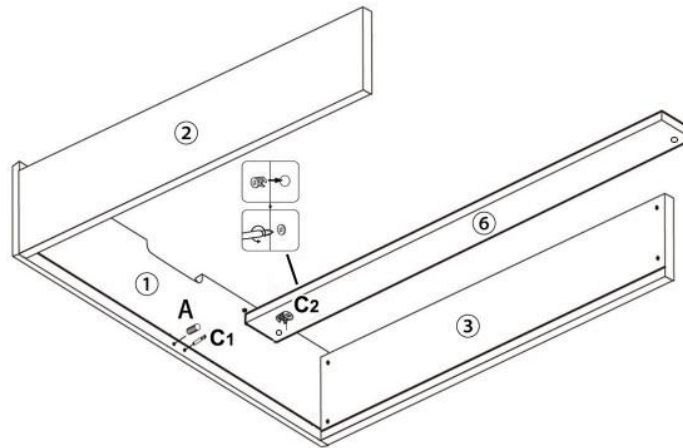

Step 3

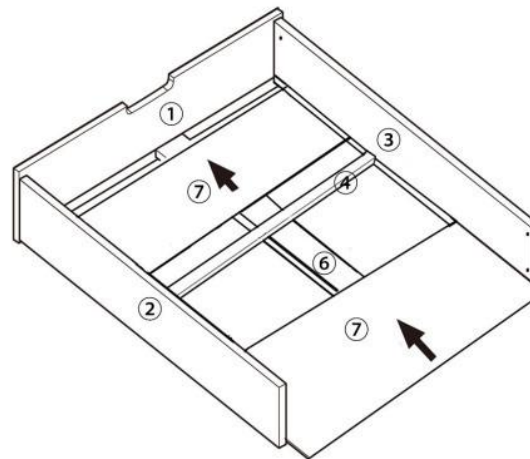


As the illustrated direction, slide the parts (Part 4 & 7) into the assembled parts in step 2.


The order is Part 4, Part 7, and lastly Part 7.

Step 4

Instructions

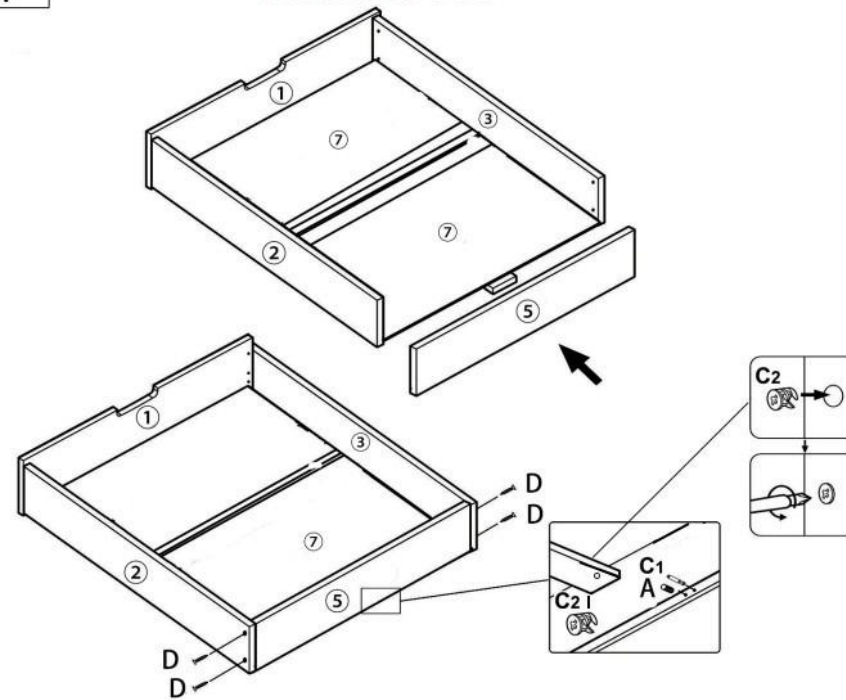

step 5

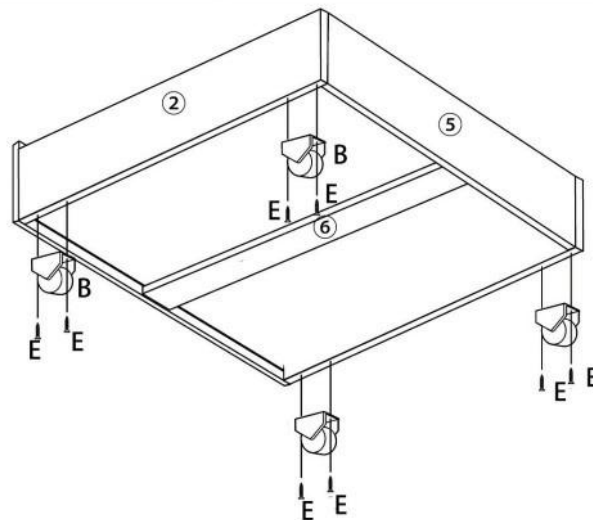

Screw the wheels (**Part B**) into the all corners of drawer with **Part E**