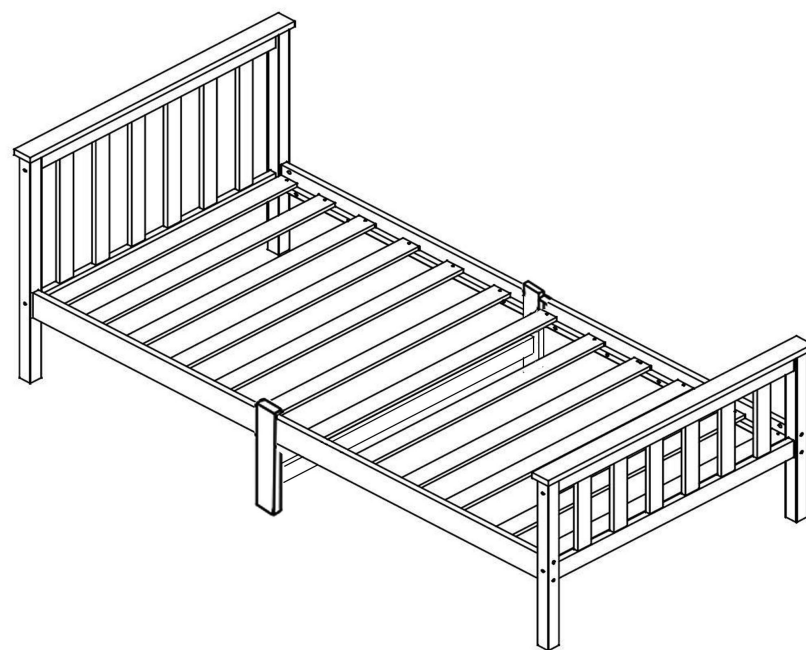





MODEL: WBED-D-TC18-92

Version 1.0


SINGLE BED FRAME



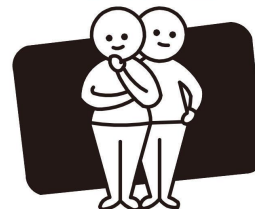TWO PEOPLE



REQUIRED

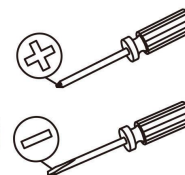


Assembly checklist




Read through the instructions carefully before you begin.



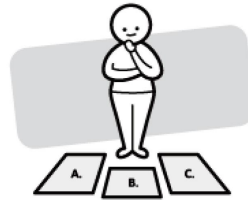Make sure you have all the required tools.
Do not use power tools.



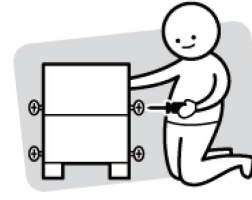Identify and lay out all of the components before you begin assembly.



Do not fully tighten all screws until step/
process finished.

Useful Information

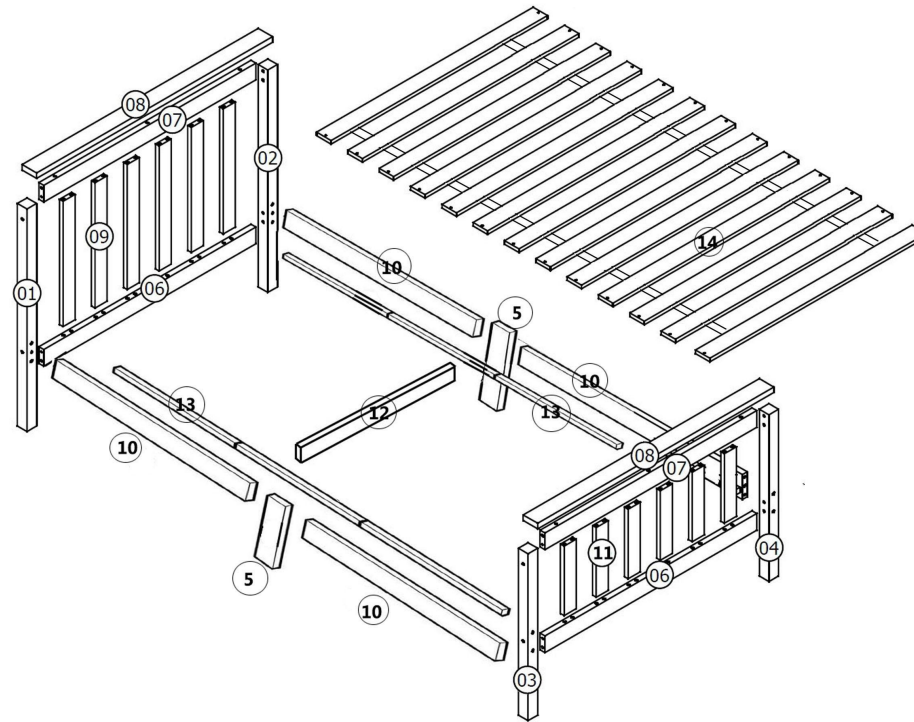
! Never use power tools, they can damage your components or hardware if used incorrectly.














! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.


! Never use any glue until you are certain that the parts belong together.

PARTS




A		12	G		4
B		14	H		4
C		70	I		1
D		2	J		1
E		4	K		56
F		4	L		18
			M		8

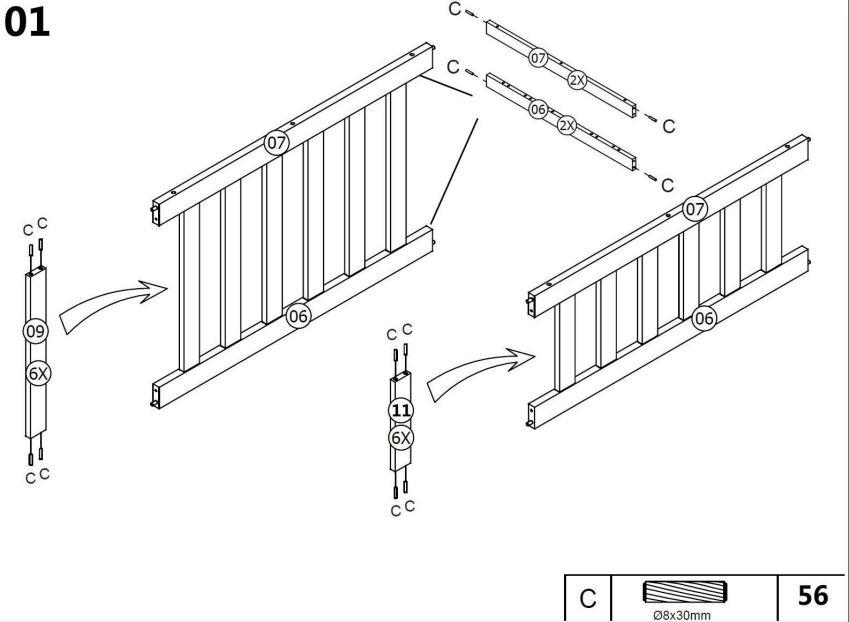01



02

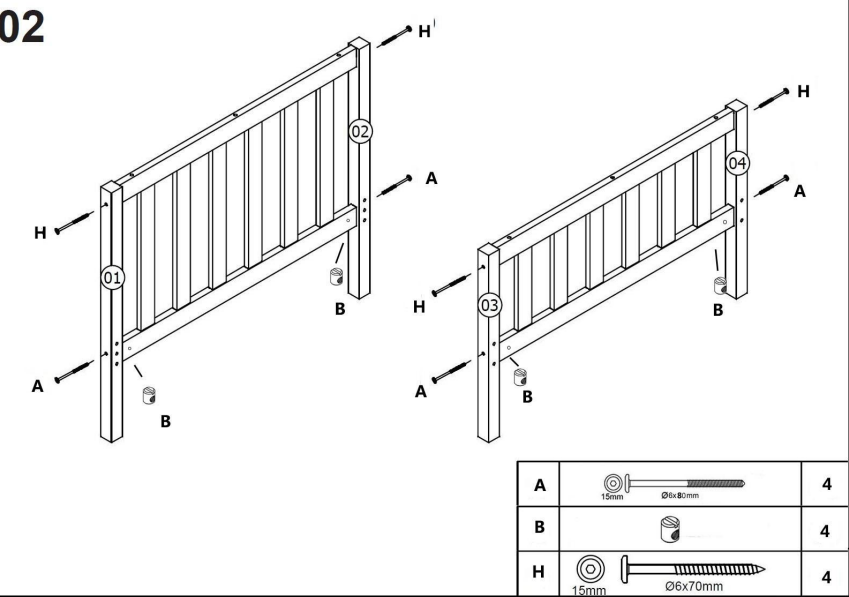

6


04










Diagram 04 illustrates the installation of Part 13. The main diagram shows a long metal rail (13) being secured to a frame (K) with multiple screws. Two circular callouts provide details: the first shows a cross-section of a rail (5) being inserted into a slot in the frame (D) using a screwdriver (D); the second shows a wrench (E) being used to tighten a nut (G) on a bolt (C) that secures the rail (10) to the frame (K).

Part 13 should be installed below the lowest line on the frame.


Note: Do not install in the middle of the two lines.




2.The inner side of the middle leg is the same level with the bedside,and the outer side of the middle leg is located on the outside of the bedside




C	 8x30mm	12
D		2
E		4
F		4
G		4
I		1
K	   Ø 4 x30mm	30

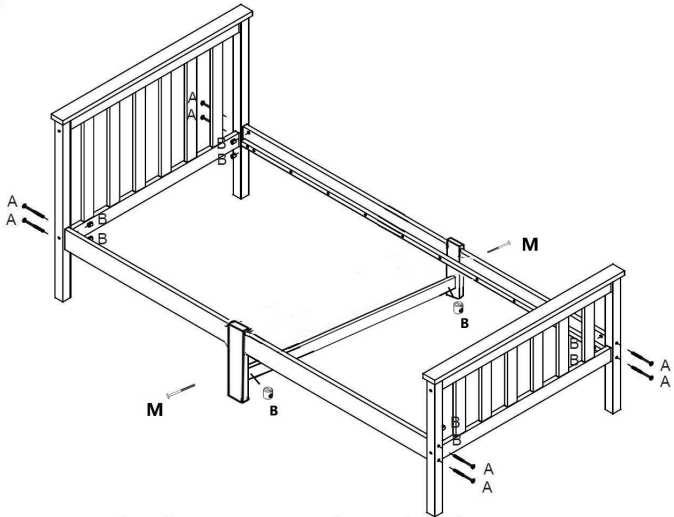

05



C	 Ø8x30mm	2	A	 15mm	 M6x80mm	08
M	 15mm	2	B	 M6x70mm		10

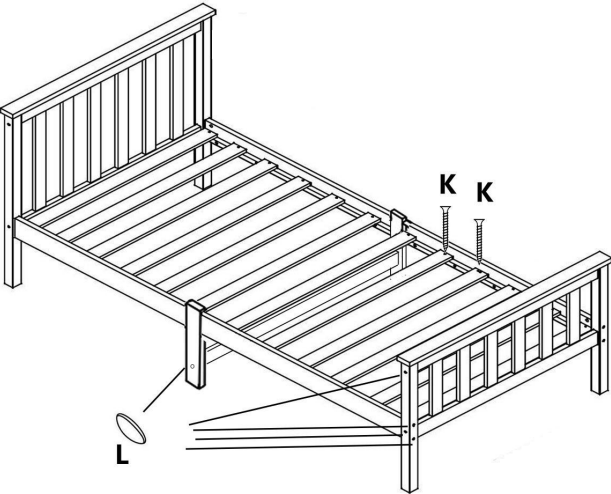06



L	 15mm	18
K	 8mm Ø4x30mm	26